
KNUCKLE GUARD

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
KNUCKLE GUARD	08P70-MKP-DQ0	CB500XA	2023.9	MII	0.3 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:

Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures. Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

⚠ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.


Component	No.	Parts Name	Qty	Parts No.
	(1)	Right knuckle guard	1	-
	(2)	Left knuckle guard	1	-
	(3)	Left guard stay	1	-
	(4)	6 mm socket bolt	1	-
	(5)	Left lever pivot bolt	1	-
	(6)	Right lever pivot bolt	1	90114-MGH-641
	(7)	Collar	1	-
	(8)	Washer	1	94102-10700
	(9)	6 mm flange nut	1	94050-06070
	(10)	6 mm SH flange bolt	1	96001-06025-07

TORQUE INFORMATION

Refer to the Service Manual for the torque values including standard torque of the removed parts. (■)


INSTALLATION

INSTALLATION IMAGE


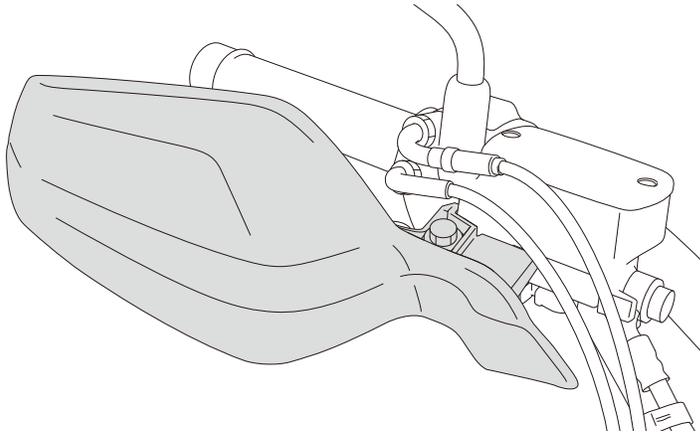


1. Remove the parts as shown. 
 - Repeat on the right side.


<Left side>

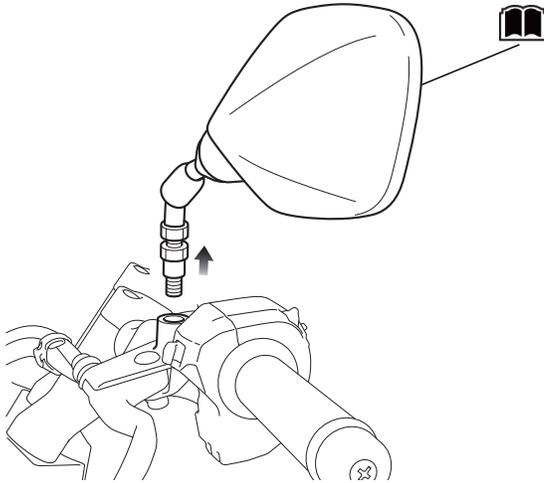



2. Install the parts as shown.

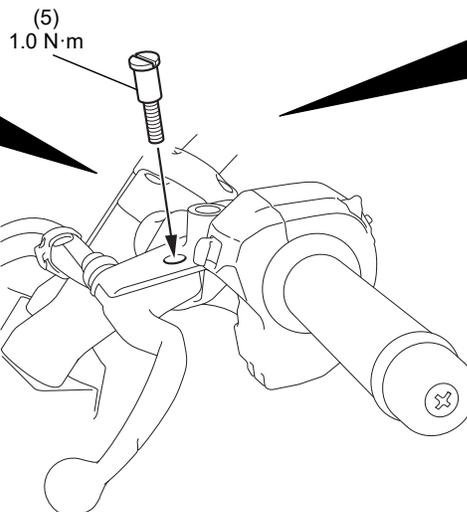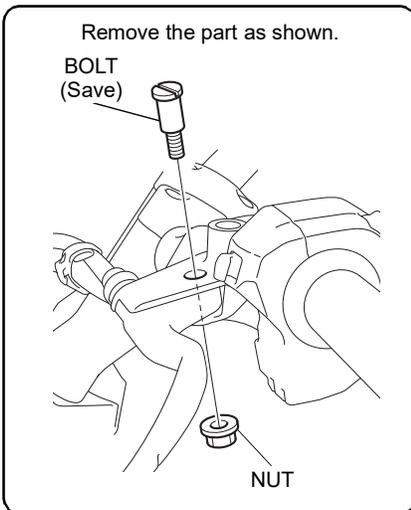



Apply grease to the part as shown.

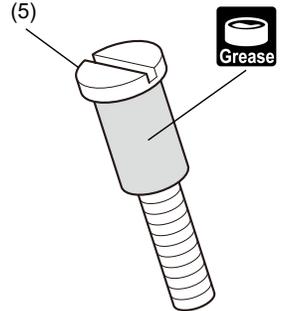


3. Install the parts as shown.

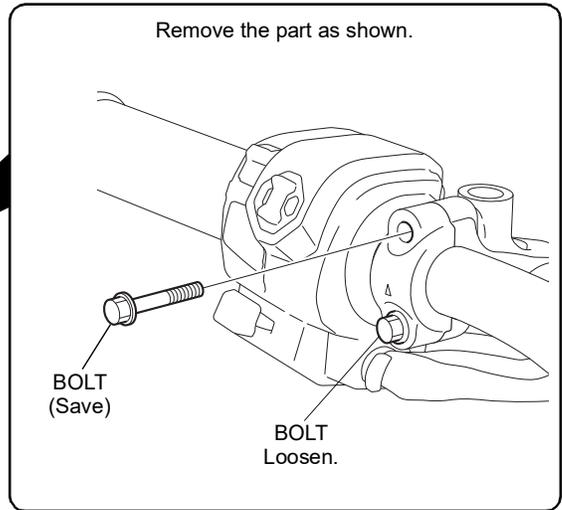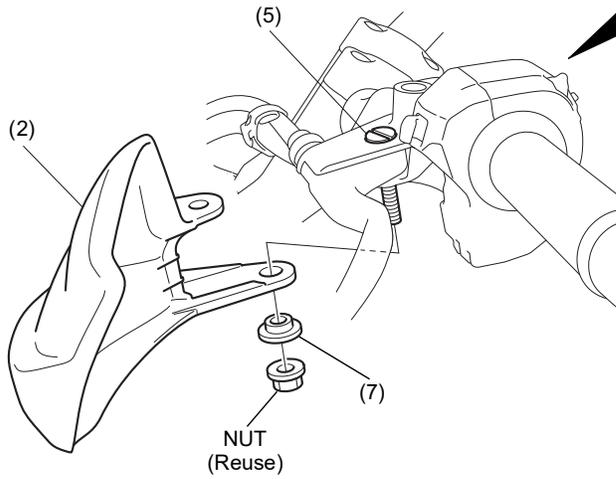


4. Loosely install the parts as shown.

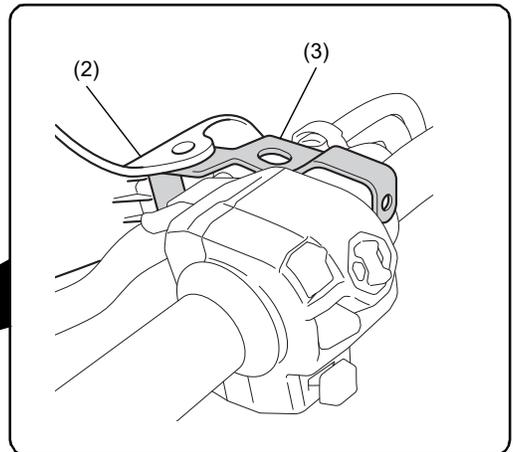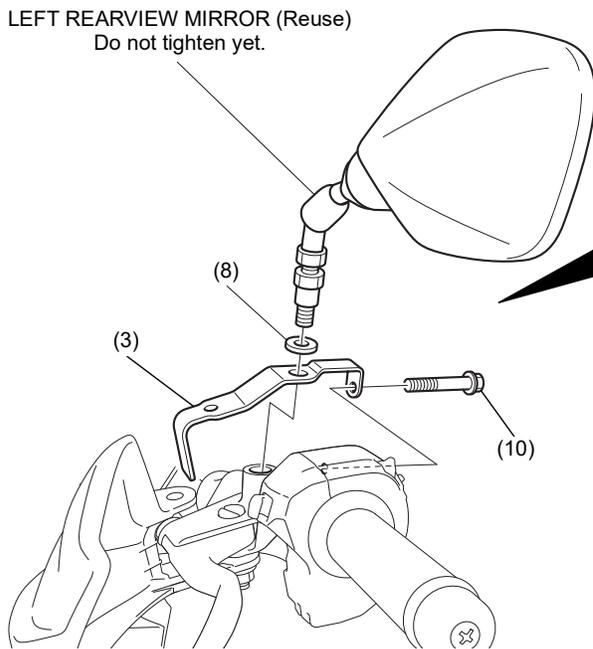


5. Install the parts as shown.

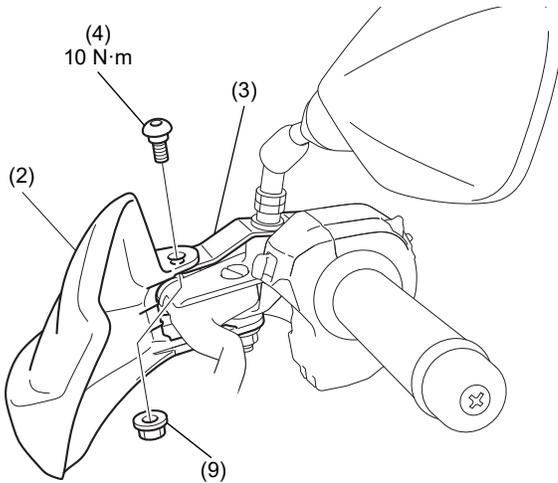


6. Tighten the loosely installed parts securely.
 • Tighten the upper bolt first, then tighten the lower bolt.

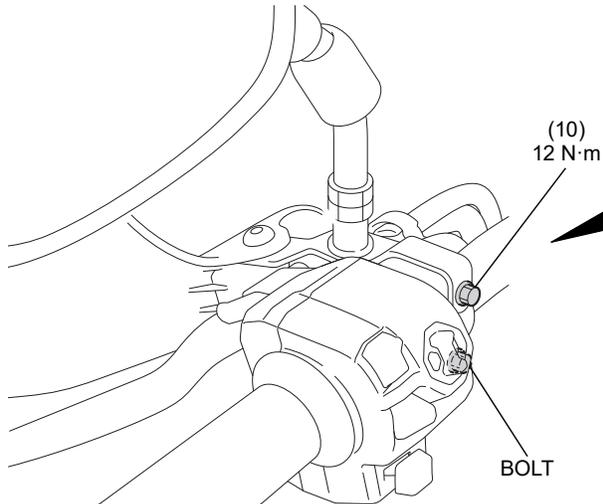

Align the lever bracket mating surface with the punch mark.


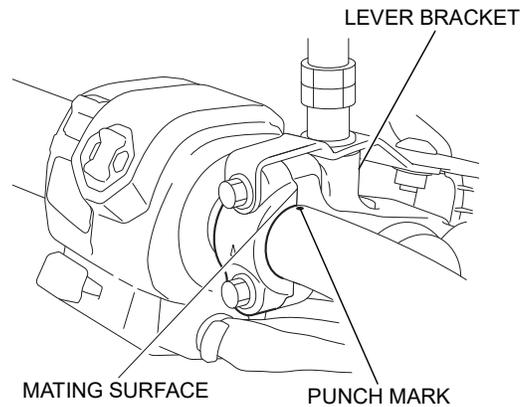


7. Tighten all loosely installed hardware to the specifications in the torque chart.

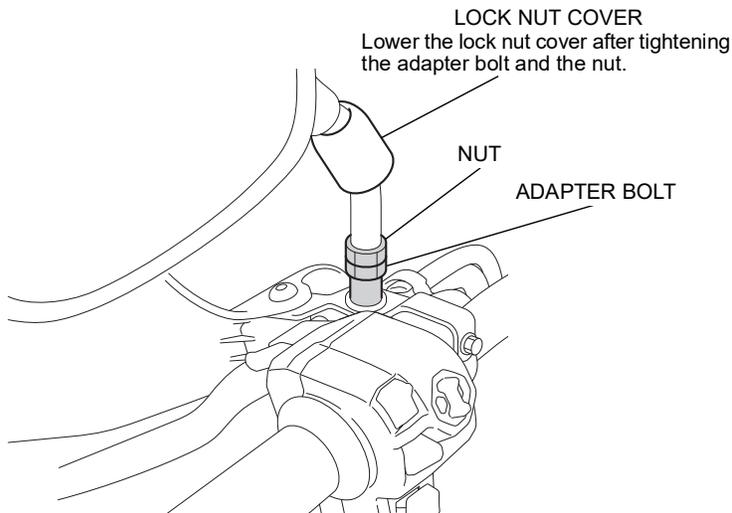



8. Remove the parts as shown.

<Right side>

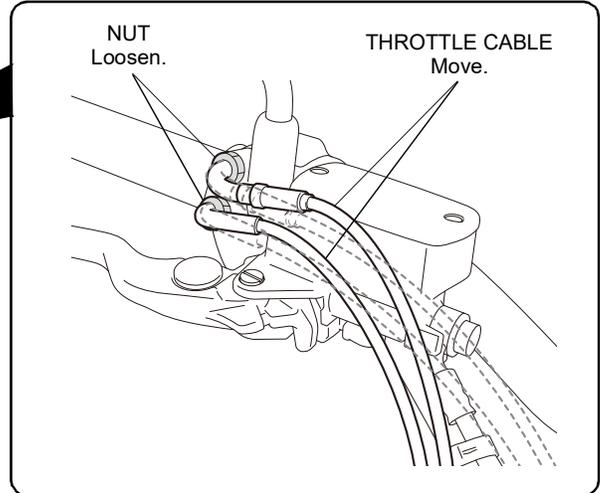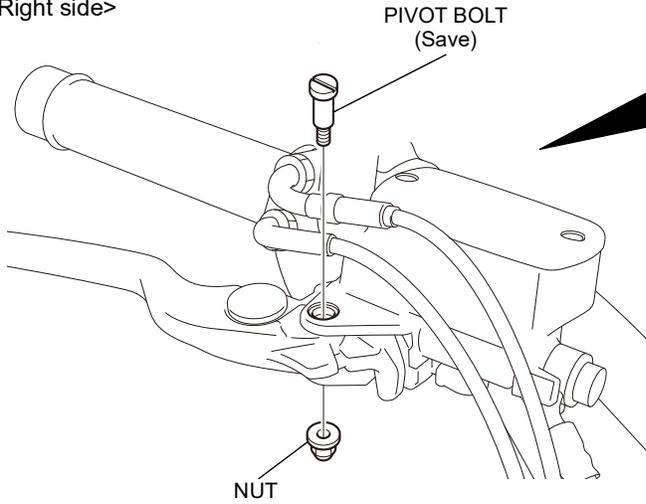

9. Install the parts as shown.
 • First install the right lever pivot bolt.

Apply grease to the part as shown.

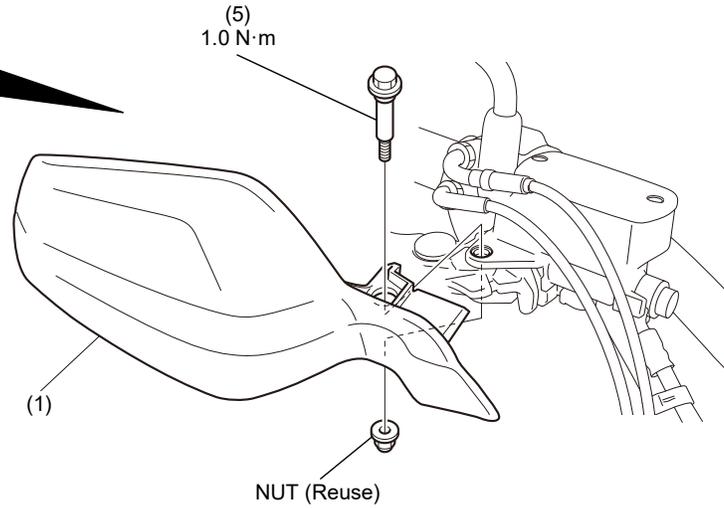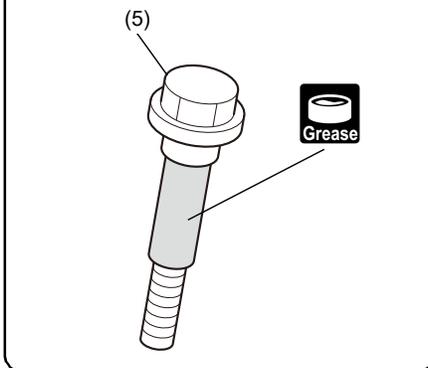

10. Reposition the throttle cables and tighten the nuts securely. (🔧)