

# INSTALLATION INSTRUCTIONS

Accessory

QUICK RELEASE ATV WINDSCREEN P/N 0SR01-TRX-100 0SR02-TRX-100 Application

Common ATV

Publication No.


MII 14423

Issue Date

January 2013

Honda Dealer: Please give a copy of these instructions to your customer.

### **PARTS LIST**

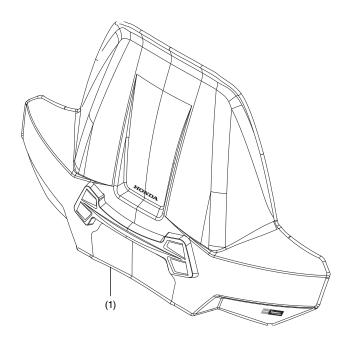

No.	Description	Qty
(1)	Windscreen	1

## **TOOLS REQUIRED**

Socket (13 mm)

Ratchet

Torque wrench

### **TORQUE CHART**

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf⋅m	lbf⋅ft
Bracket arm nut	8.1	0.8	6

#### **USE AND CARE INFORMATION**

- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, and then wash with warm, soapy water and a clean cloth or sponge.
  Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, or benzine to clean this accessory. Also do not use acid or alkaline cleaners.
  - Wipe up spilled brake or battery fluid at once as they may damage the plastic surface.
- If the ATV is left covered for an extended period of time, park in the shade. Parking a covered ATV in direct sunlight can cause the accessory to deform due to heat buildup under the cover.
- Check the accessory mounts frequently and retighten if necessary.


# NOTICE

The windscreen can be damaged by high winds during transportation. Remove the windscreen before transporting or trailering the ATV. Be sure to check for correct handlebar range of motion and component clearance every time the windscreen is re-installed.




#### **INSTALLATION**


1. Loosen but do not remove the bracket arm nut. The bracket arm should be able to rotate smoothly during installation, while still supporting the windscreen.

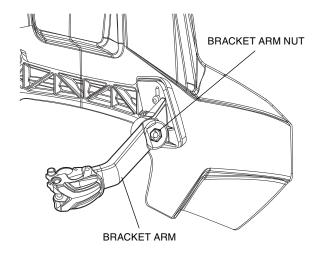

2. Open the right-side clamp assembly and align it in the middle of the right upright section of the handlebar.

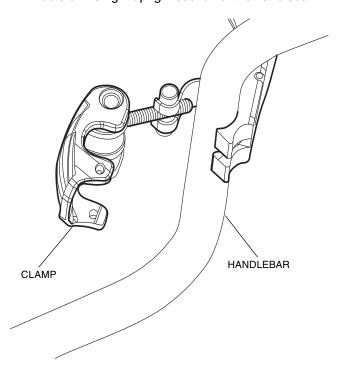


- 3. Close the clamp assembly around the handlebar as shown.
  - If the clamp is too tight or too loose, adjust tension by twisting the latch handle counterclockwise to loosen, or clockwise to tighten.
  - Choke equipped models: Make sure the clamp assembly does not interfere with the operation of the choke knob.

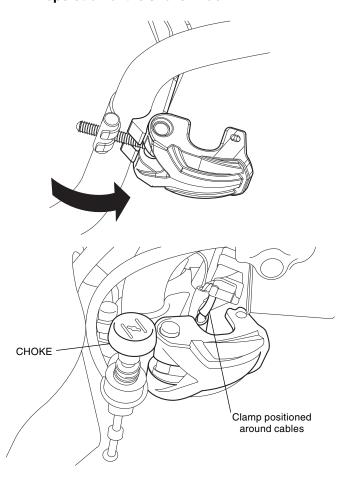

4. Open the left-side clamp assembly and align it in the middle of the left upright section of the handlebar. Adjust the tension of the clamp as indicated in Step 3.

5. Once the clamps are mounted evenly to the handlebar, adjust the windscreen to the desired angle. Once proper angle is achieved, tighten the bracket arm nuts to the specified torque.

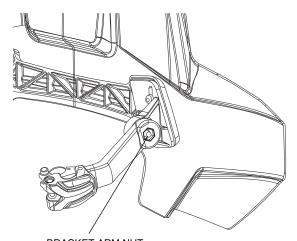

BRACKET ARM NUT TORQUE: 6 lbf-ft (8.1 N-m, 0.8 kgf-m)

- 6. Turn the handlebar fully left and right to check for any interference between the windscreen assembly and any cables, wires, or components. Adjust the position of the clamps or windscreen angle as necessary so that cables, hoses, and wires do not touch the windscreen at any handlebar position.
- 7. Ensure the windscreen is completely and securely attached before operating the ATV.