

METER VISOR

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
METER VISOR	08R70-MLB-D20	CB750A	2024.10	MII	0.1 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:

Please give a copy of these instructions to your customer.

Customer

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

NOTIFY WARNING YOU CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION You CAN be HURT if you don't follow instructions.

★NOTICE The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

NOTE Things you want to know, things that are useful to know.

Follow the instructions of the Service Manual.

Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures.

Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

ACAUTION

To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTICE

• Take care not to damage the painted surfaces of the motorcycle.

NOTE:

- · Save all removed parts unless otherwise indicated.
- When removing the headlight cowl after the meter visor is installed, remove the meter visor and well nut (part No.4) before removing the headlight cowl.

TORQUE INFORMATION


Refer to the Service Manual for the torque values including standard torque of the removed parts. (iii)


PARTS LIST


When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.


Component		Parts Name	Qty	Parts No.
		Meter visor	1	_
	(2)	Meter visor stay	1	_
(4)	(3)	5 x 20 mm socket bolt	4	90103-MGH-H20
A	(4)	Well nut	8	90111-KW3-003
	(5)	Plastic washer	8	90504-964-000
	(6)	5 x 16 mm special bolt	4	90116-MKF-D40
	(7)	Rubber washer	4	64205-166-610
		Thread cap	2	12372-KGB-610
(3) (5) (7) (8)				

INSTALLATION

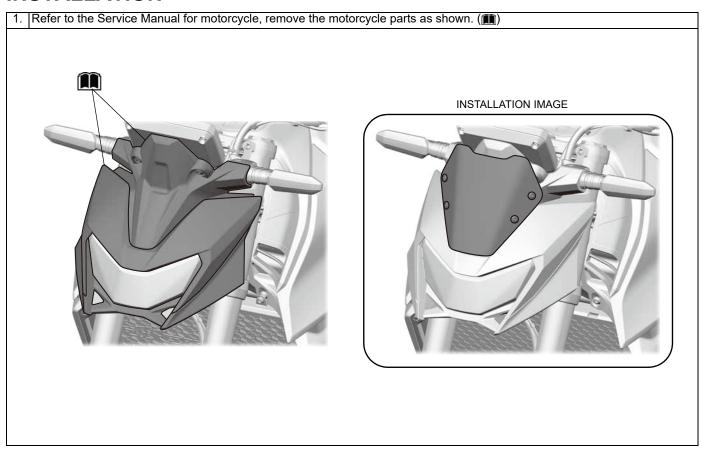

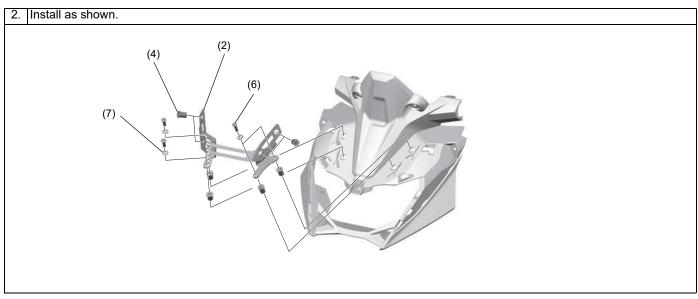

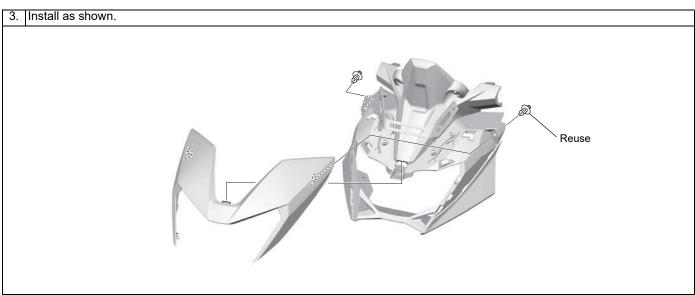

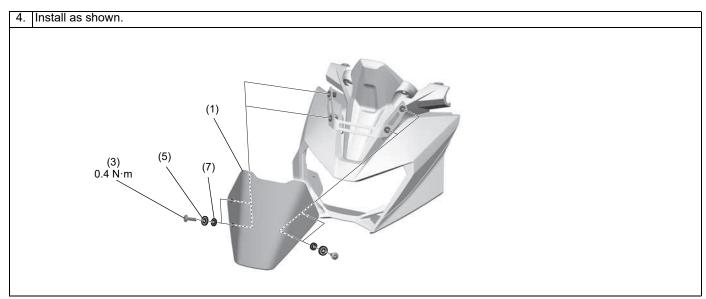

Installation Instructions

