




INSTALLATION INSTRUCTIONS

Accessory	Application	Publication No.
ACCESSORY SOCKET P/N 08U70-MKP-D80	CB500XA	MII
		Issue Date October 2018

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

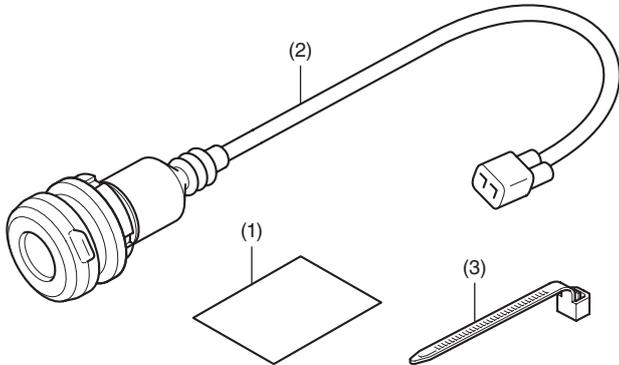

No.	Description	Qty
(1)	URL paper	1
(2)	Accessory socket	1
(3)	Wire tie	2

TORQUE CHART

Refer to the Service Manual for the torque values of the removed parts.

INSTALLATION


CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:


- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memories of the clock will be erased when you disconnect the battery. Reset the memories after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.

- Remove the seat and disconnect the negative (-) cable of the battery.

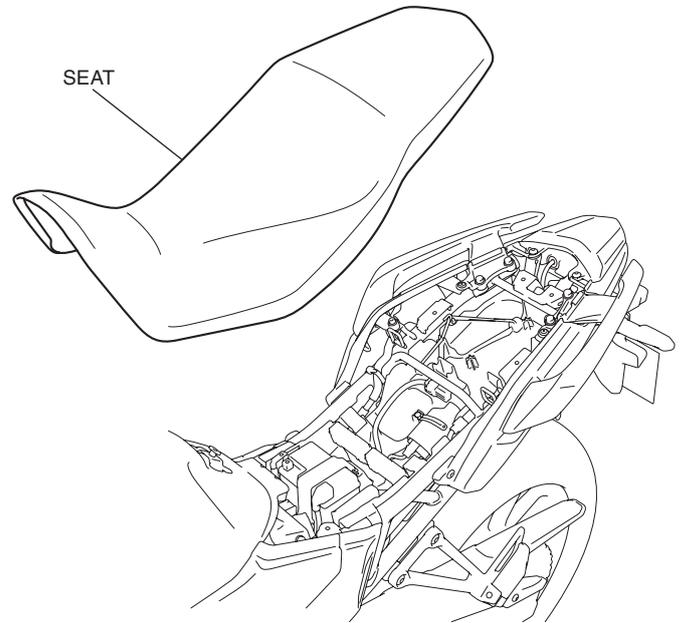


- Remove the left side cover as shown.


<Left side>

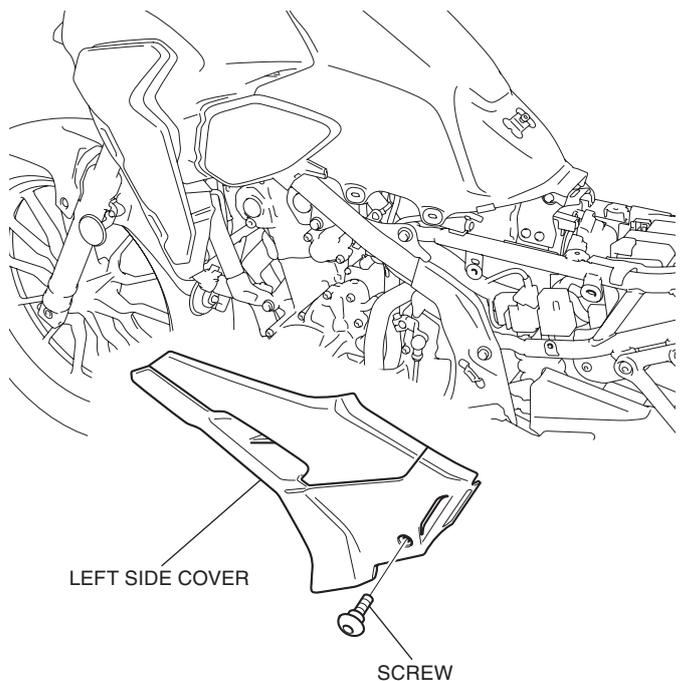


3. Remove the parts as shown.
<Left side>

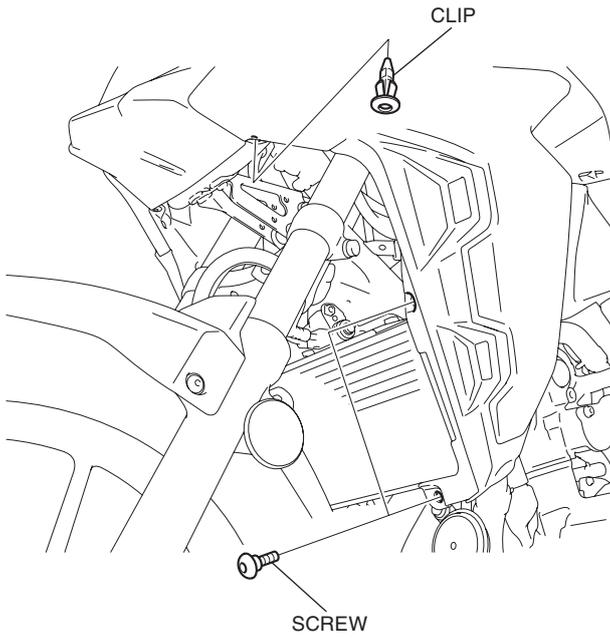


4. Remove the left middle cowl as shown.
<Left side>

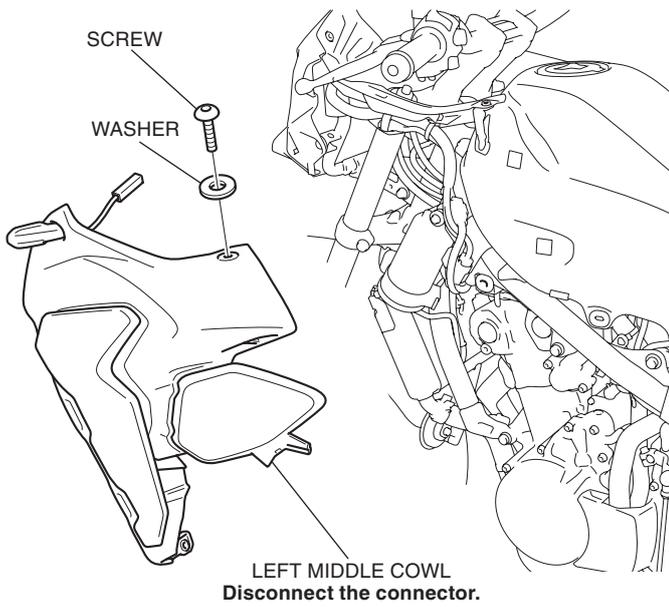


5. Remove the grommet as shown.
<Left side>

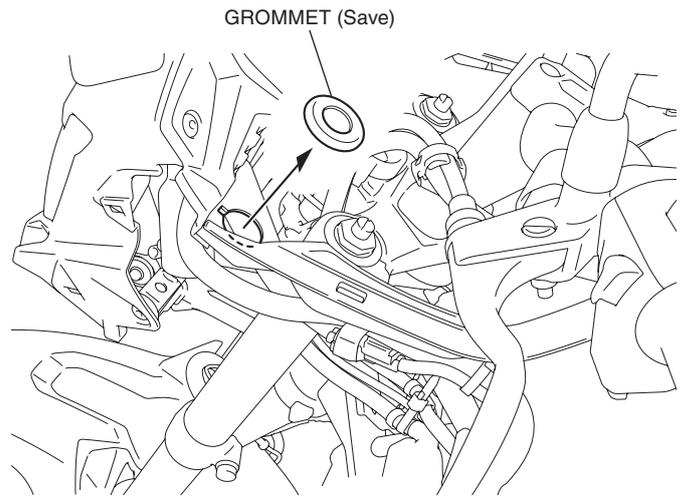


6. Remove the dummy connector as shown.

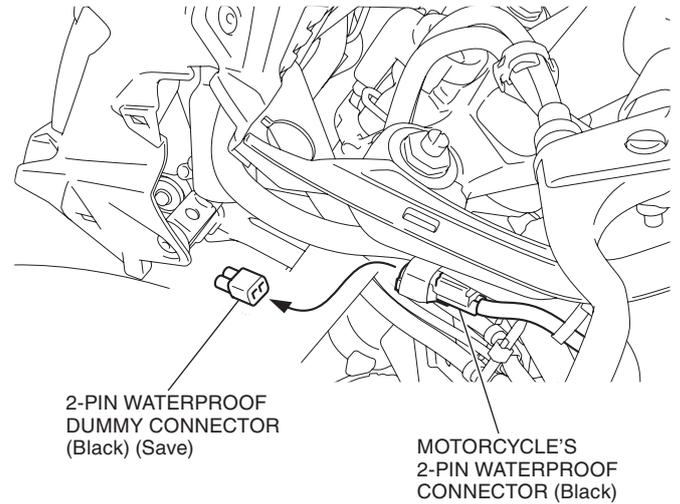


7. Move the cover as shown.

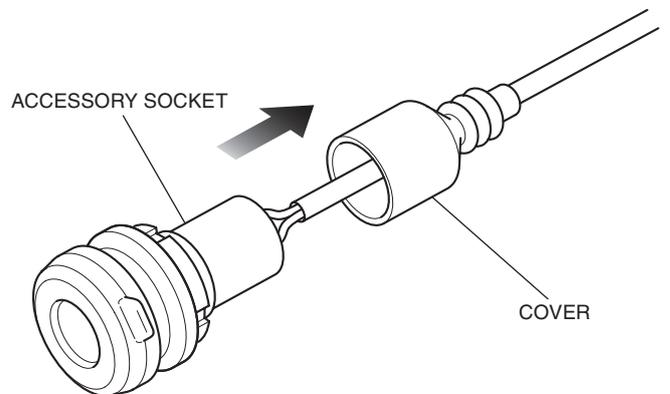



8. Remove the nut as shown.

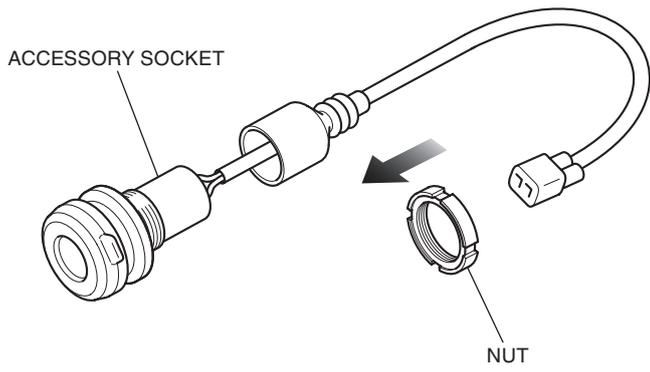


9. Route the accessory socket harness as shown.

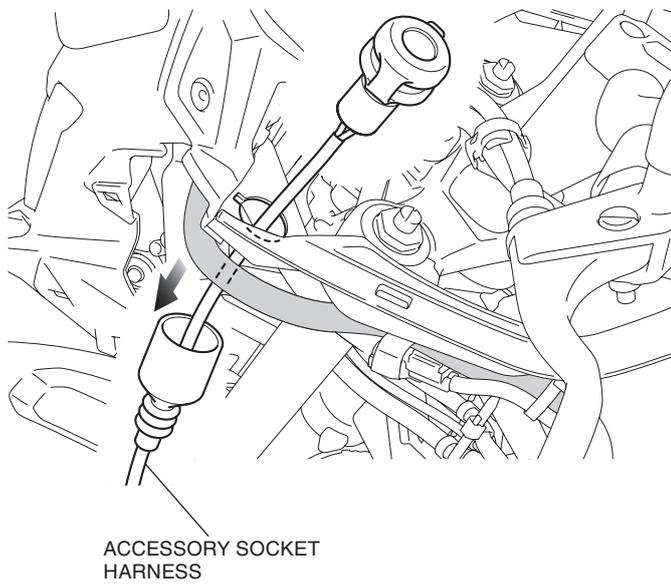


10. Install the accessory socket as shown.

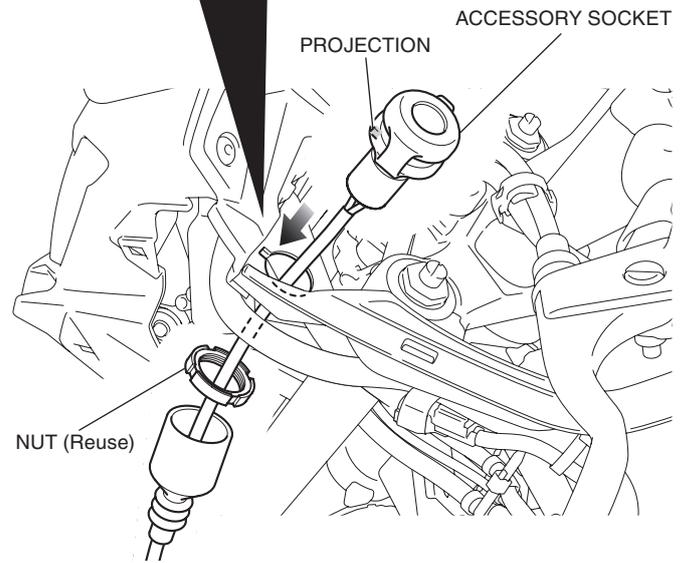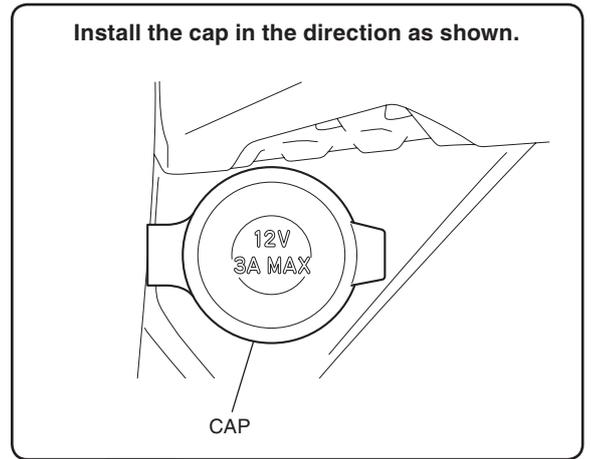


11. Install the cover as shown.

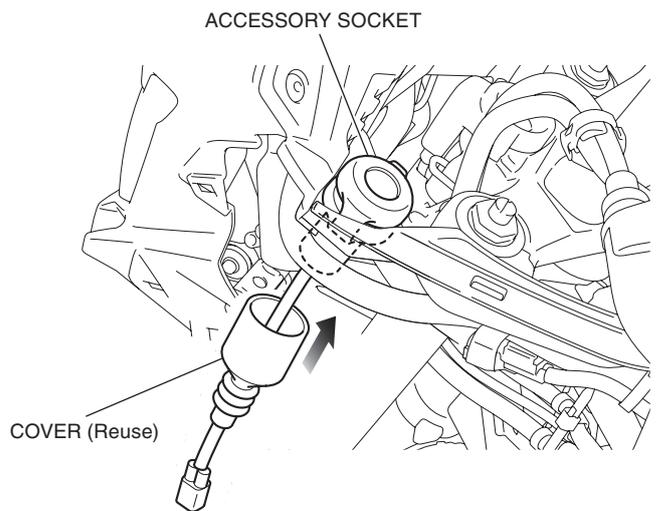

12. Connect the accessory socket harness as shown.

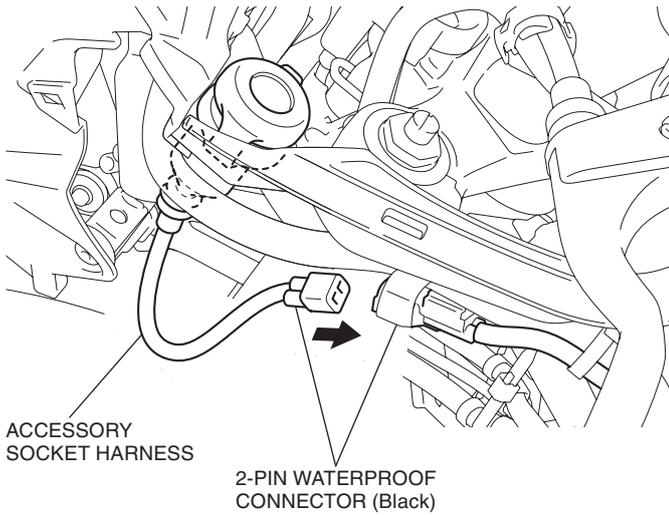

13. Secure the accessory socket harness with the wire ties as shown.

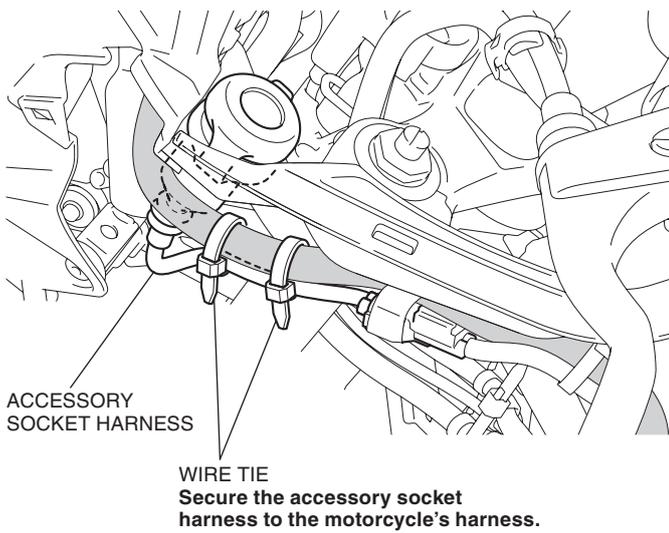

14. Install the motorcycle's parts in the reverse order of removal.

- **Confirm that any wire harness is not caught or too tight.**

15. Check the accessory socket, headlight and the other lights for proper operation.