



# INSTALLATION INSTRUCTIONS


|   |                     |                      |
|---|---------------------|----------------------|
| Accessory                                 | Application         | Publication No.      |
| <b>WHEEL STRIPE<br/>P/N 08F79-MKR-D10</b> | <b>CBR1000ST/SP</b> | <b>MII</b>           |
|   |                     | Issue Date           |
|   |                     | <b>December 2019</b> |

|   |                     |                      |
|---|---------------------|----------------------|
| Accessory                                 | Application         | Publication No.      |
| <b>WHEEL STRIPE<br/>P/N 08F79-MKR-D10</b> | <b>CBR1000ST/SP</b> | <b>MII</b>           |
|   |                     | Issue Date           |
|   |                     | <b>December 2019</b> |

|   |                     |                      |
|---|---------------------|----------------------|
| Accessory                                 | Application         | Publication No.      |
| <b>WHEEL STRIPE<br/>P/N 08F79-MKR-D10</b> | <b>CBR1000ST/SP</b> | <b>MII</b>           |
|   |                     | Issue Date           |
|   |                     | <b>December 2019</b> |

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

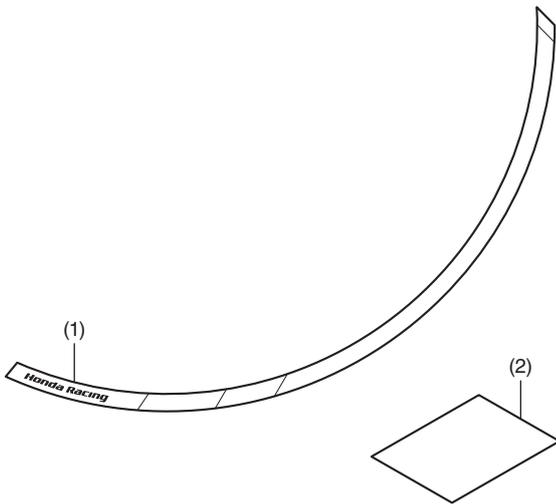

| No. | Description  | Qty |
|-----|--------------|-----|
| (1) | Wheel stripe | 12  |
| (2) | URL paper    | 1   |

## TOOL AND SUPPLIES REQUIRED

- Scale
- Isopropyl alcohol
- Shop towel

## INSTALLATION

### ▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

### NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 21°C (70°F).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.


- Illustration shows CBR1000ST type, another type is similar.**

1. Degrease the front wheel surface as shown.

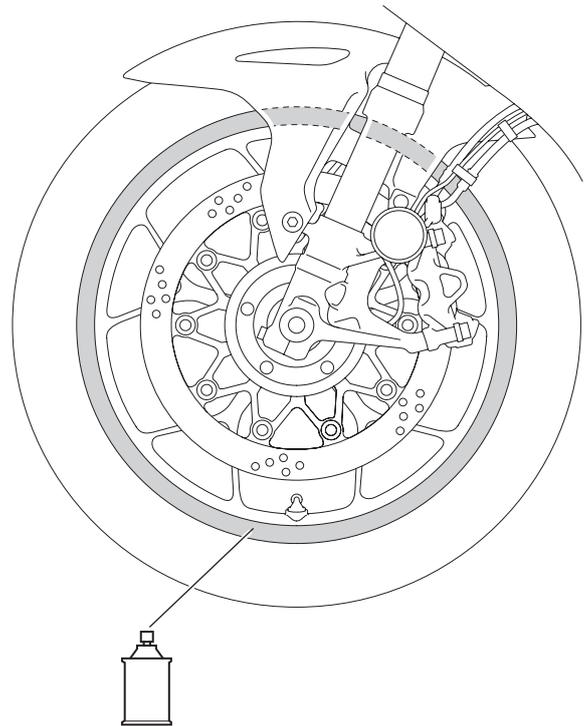


**ISOPROPYL ALCOHOL**  
Thoroughly clean the area where the wheel stripe will be attached.


2. Apply the wheel stripe as shown.
  - **Attach the wheel stripe in the middle of the rim width.**

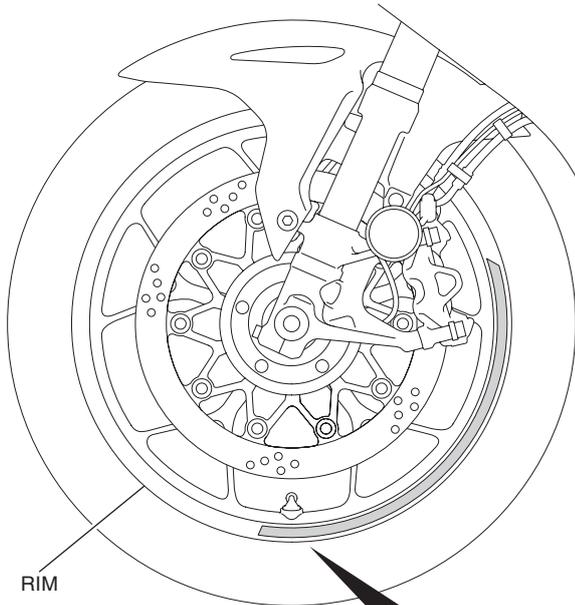


**Align the mark of the wheel stripe with the center of the valve as shown.**

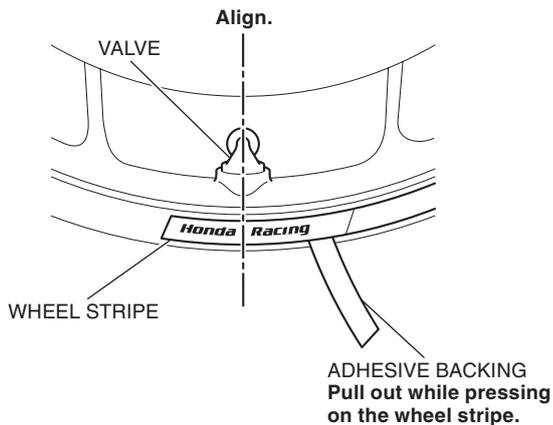


3. Apply the 2nd and 3rd wheel stripe in the dimension shown.

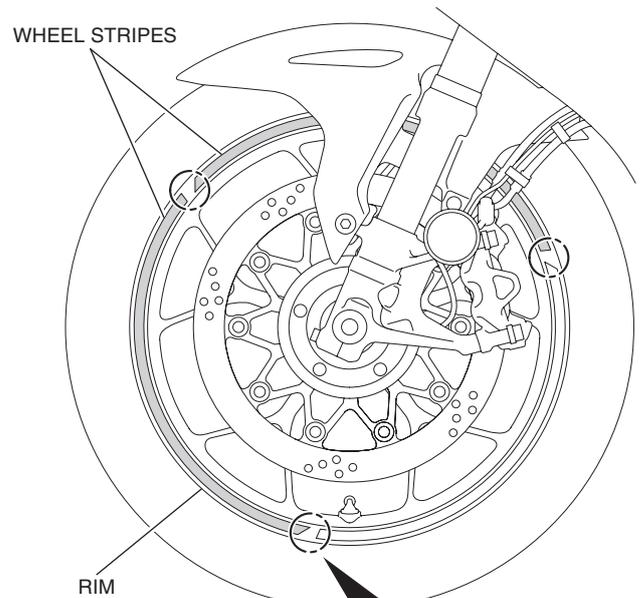

**Align the clearance between each wheel stripe.**

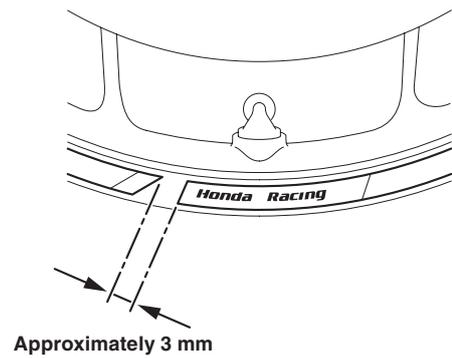

4. Press firmly on the installed wheel stripes to adhere.

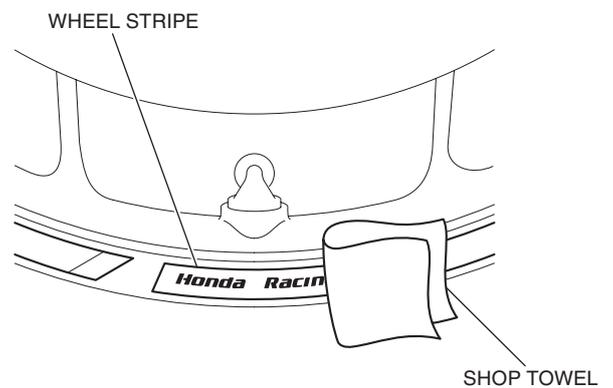

5. Repeat on the right side.
6. Attach the stripe on rear wheel surfaces in the same manner.