



# INSTALLATION INSTRUCTIONS


Accessory  
**TANK PAD**  
P/N 08P82-MKR-D10

Application  
**CBR1000ST/SP**

Publication No.  
**MII**  
Issue Date  
**December 2019**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

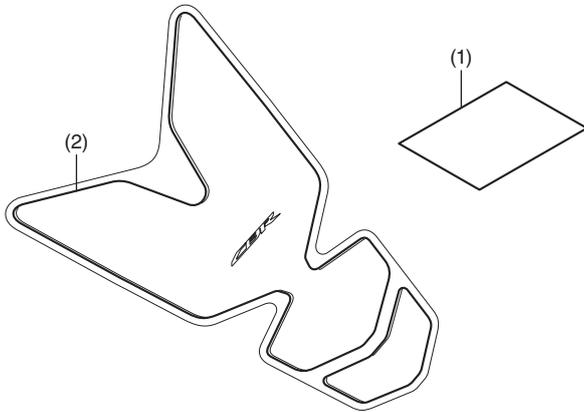

No.	Description	Qty
(1)	URL paper	1
(2)	Tank pad	1

## SUPPLIES REQUIRED

Isopropyl alcohol  
Shop towel

## INSTALLATION


### CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.


### NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 21°C (70°F).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.


- Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

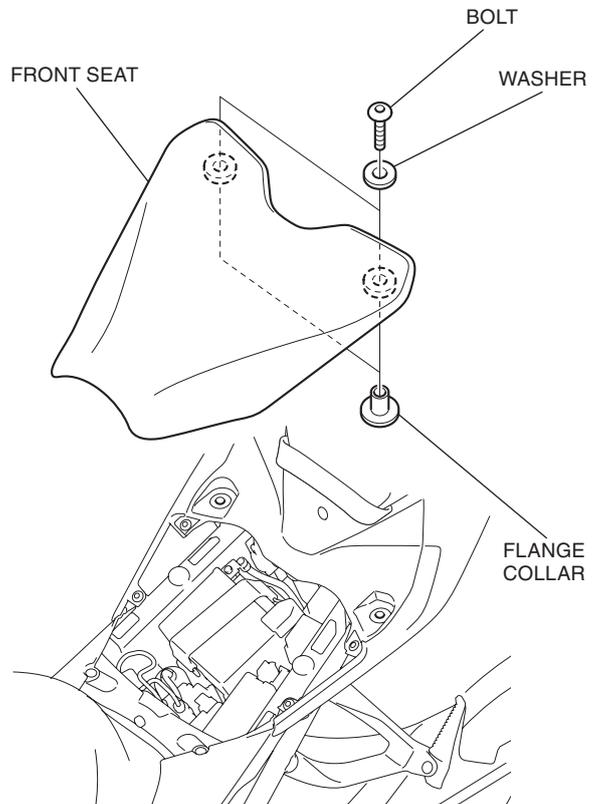


- Peel back an end of the adhesive backings on the back of the tank pad as shown.

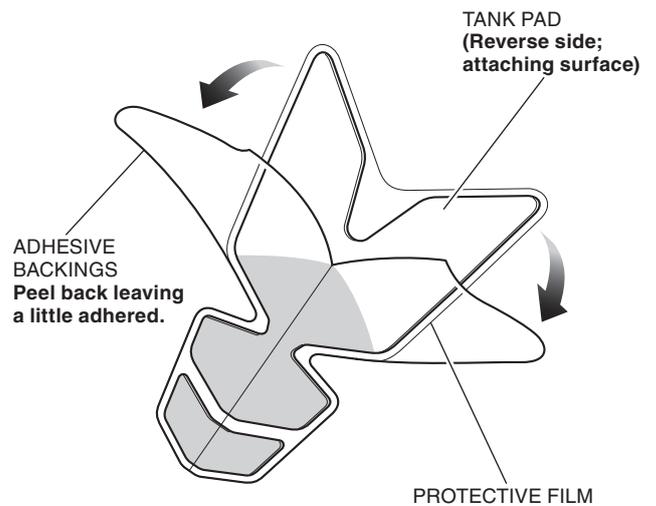


3. Loosely install the tank pad as shown.
  - **Position so that the tank pad is at the center of the fuel tank.**
  - **Be sure to not cover the attached fuel tank label with the tank pad.**

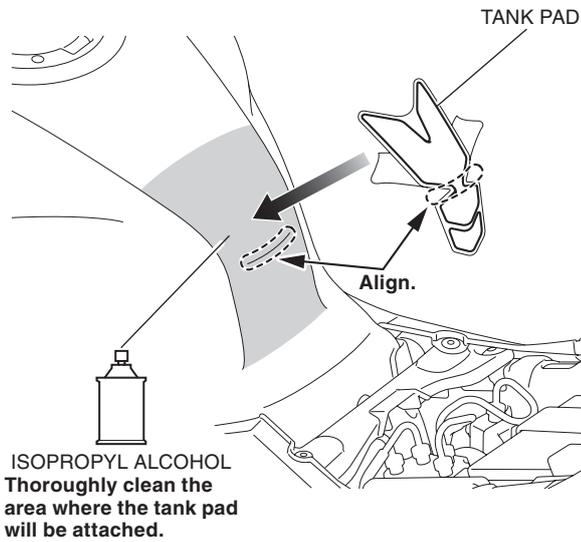

4. Attach the tank pad as shown.

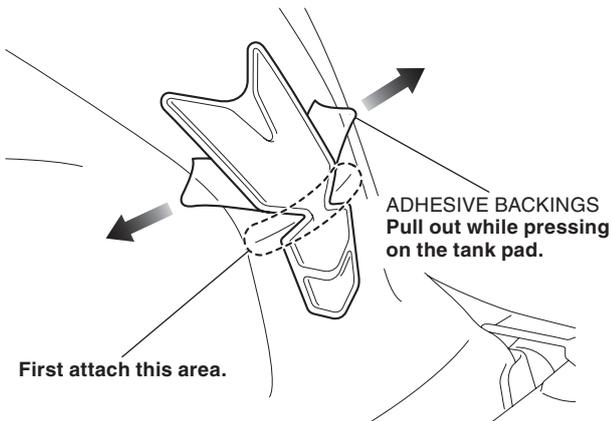

5. Attach the tank pad while pressing down radially as shown.

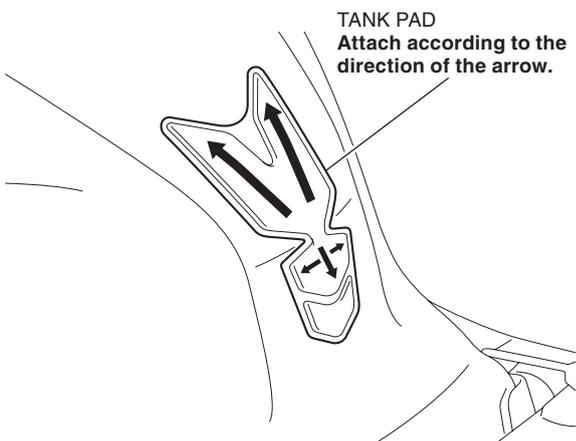

6. Apply adequate pressure to the attached tank pad and remove the protective film.
7. Install the motorcycle's parts in the reverse order of removal.