



INSTALLATION INSTRUCTIONS

Accessory

HIGH WINDSCREEN
P/N
Clear: 08R71-MKR-D10
Smoke: 08R70-MKR-D10

Application

CBR1000ST/SP

Publication No.


MII

Issue Date

December 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

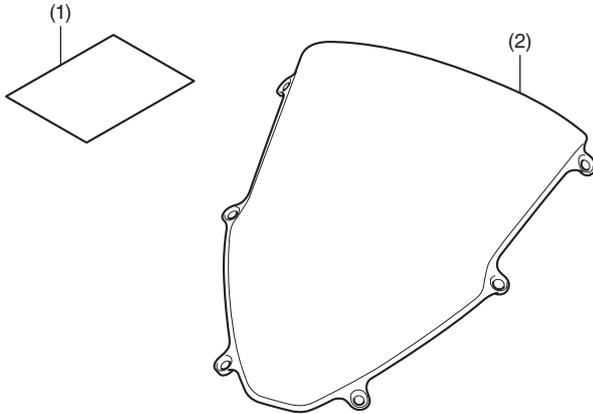

No.	Description	Qty
(1)	URL paper	1
(2)	High windscreen (For USA: Clear type, Other countries: Smoke type)	1

TORQUE INFORMATION

Refer to the Service Manual for the torque values of the removed parts.

INSTALLATION


CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.


NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- After reconnecting the battery, refer to the motorcycle Owner's Manual and set the meter.
- After this accessory installation, check the lights (e.g. right/left turn signal lights and brake lights) for proper operation.
- Save all removed parts unless otherwise indicated.
- Illustration shows CBR1000ST type, another type is similar.**


- Refer to the Service Manual for the motorcycle, remove the motorcycle parts, and disconnect the negative (-) cable from the battery as shown.

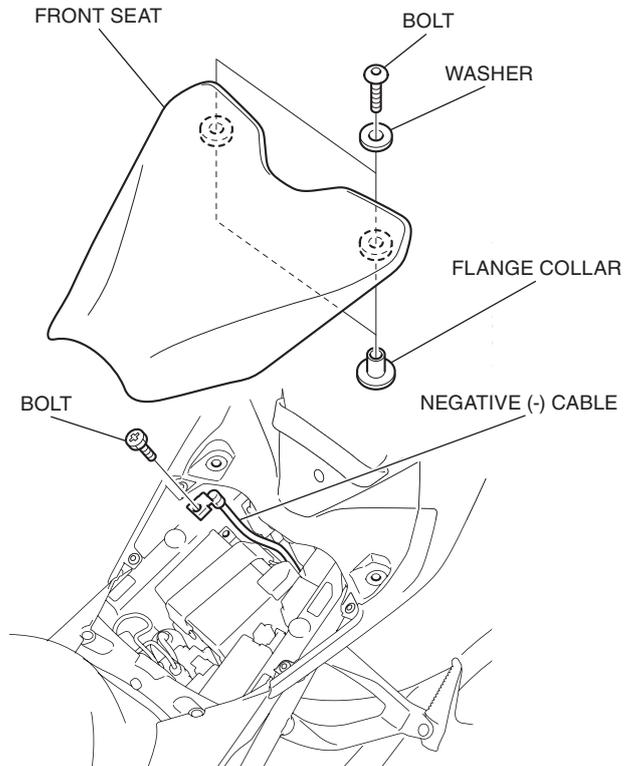



- Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - Repeat on the right side.**

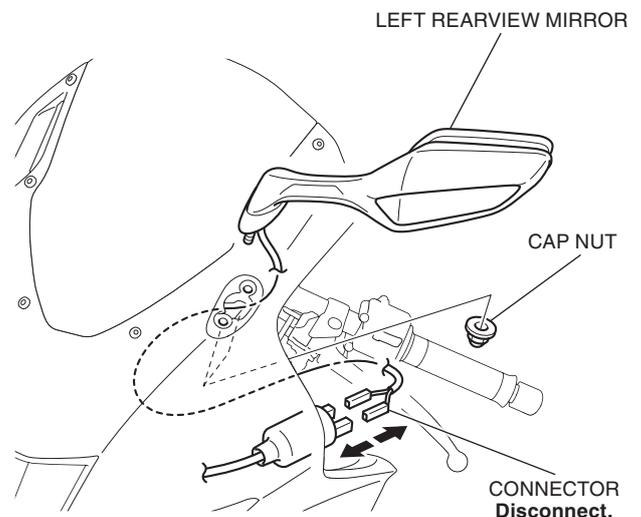

3. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.

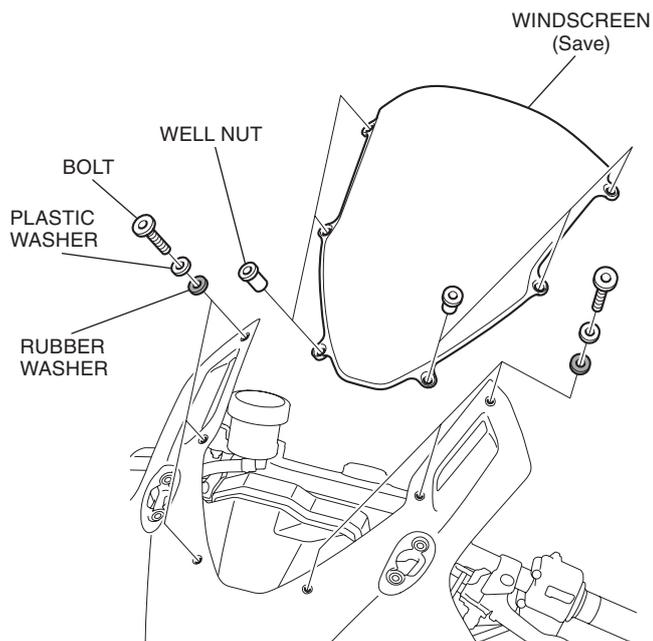

4. Install the high windscreen as shown.

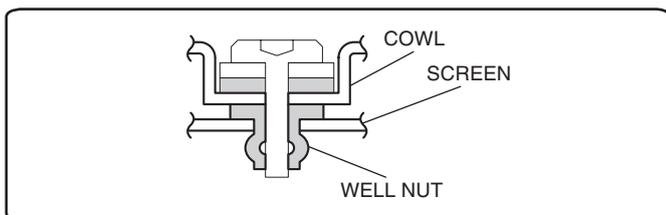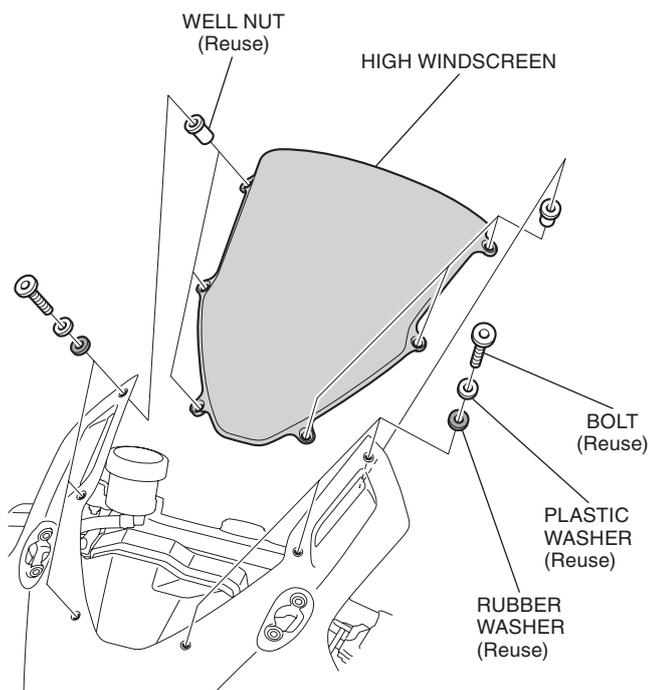

5. Install the motorcycle's parts in the reverser order of removal.
 - When reinstalling the removed parts on the motorcycle, make sure that the wires and harnesses are not pinched.