



INSTALLATION INSTRUCTIONS


Accessory
TANK PAD
P/N 08P71-MKF-DK0

Application
CBR650RA

Publication No.
MII
Issue Date
October 2018

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

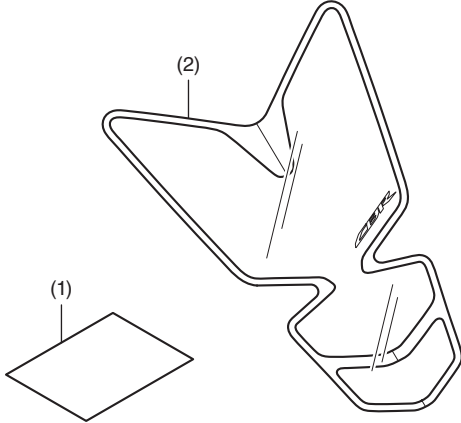

No.	Description	Qty
(1)	URL paper	1
(2)	Tank pad	1

SUPPLIES REQUIRED


- Masking tape
- Isopropyl alcohol
- Shop towel

INSTALLATION


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.



- Clean the surface of the area shown using an isopropyl alcohol.

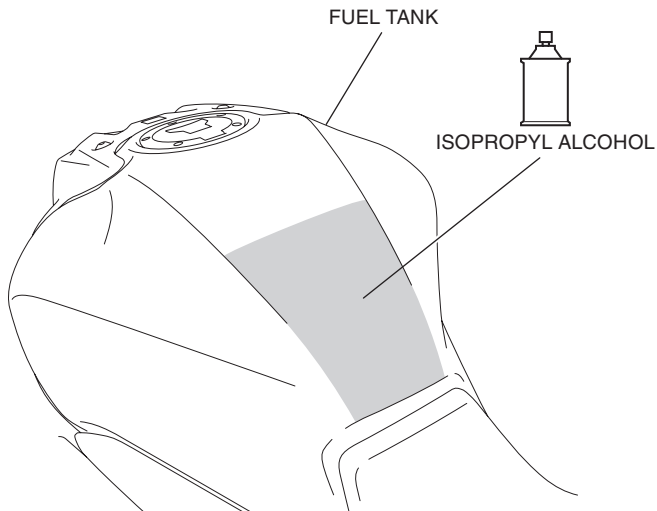


- Remove the application film as shown.

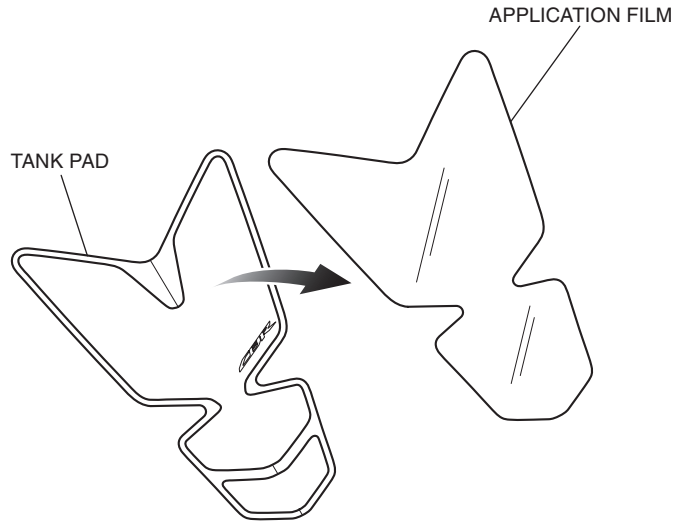


- Arrange the tank pad as shown and mark with masking tape.

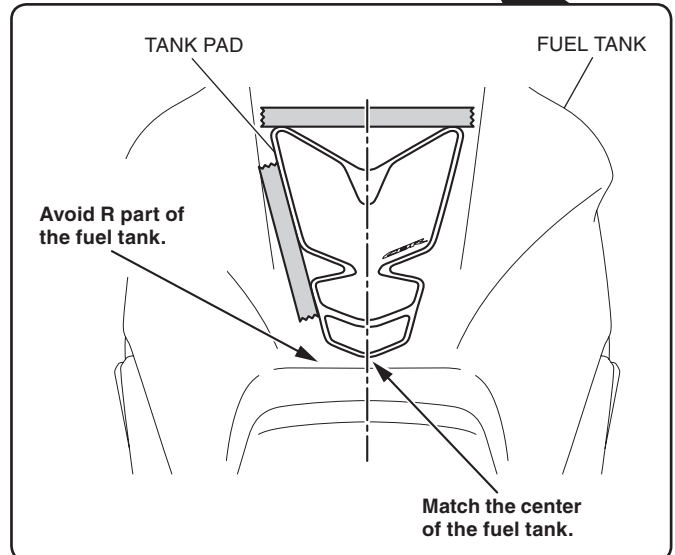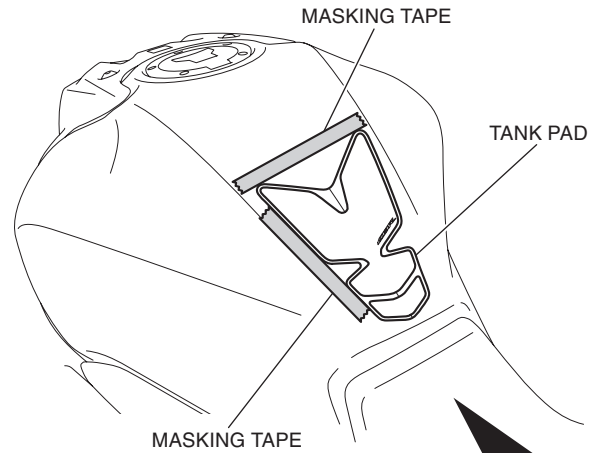


4. Peel off the adhesive backing on the tank pad as shown.

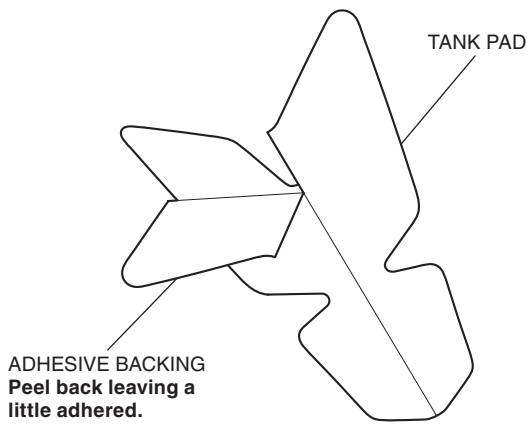

5. Attach the tank pad as shown.

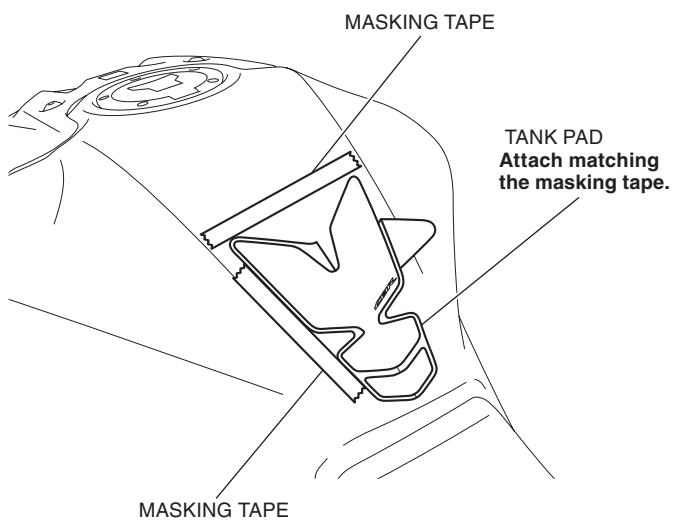

6. Remove the adhesive backing as shown.

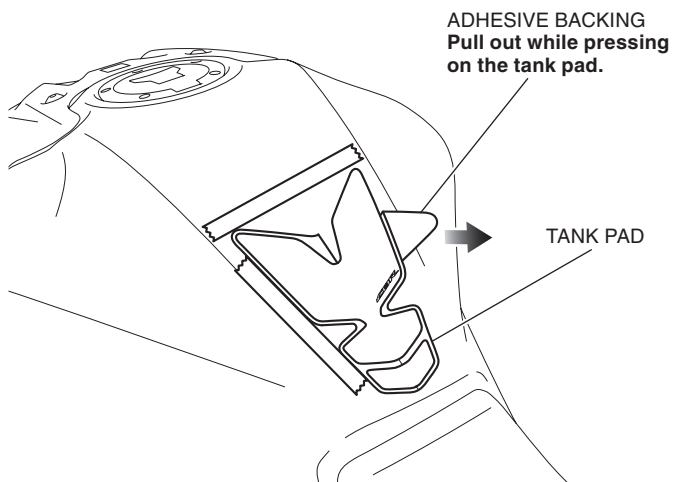

7. Remove the remaining adhesive backing.
8. Remove the masking tape and apply adequate pressure to the attached tank pad.