



# INSTALLATION INSTRUCTIONS

Accessory

**QUICK RELEASE ATV WINDSCREEN**  
P/N 0SR01-HR5-100

Application

**TRX500FA5/FA6/FA7**  
**TRX500FM5/FM6/FM7**

Publication No.



**MII 15016**

Issue Date

**December 2015**

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

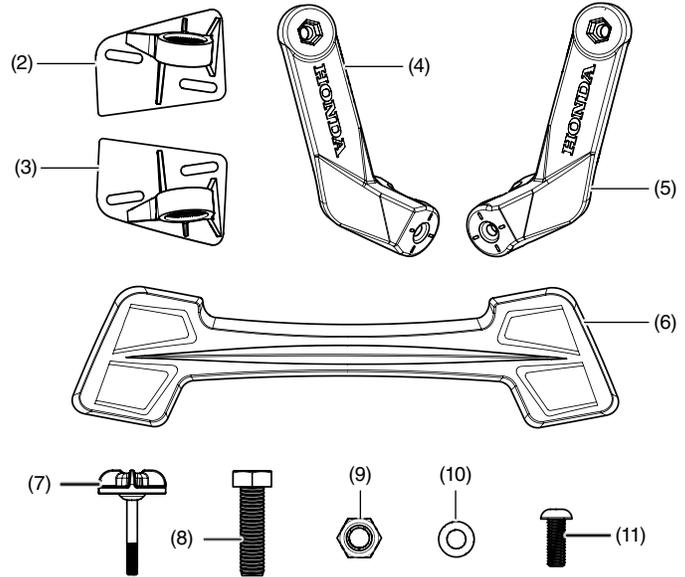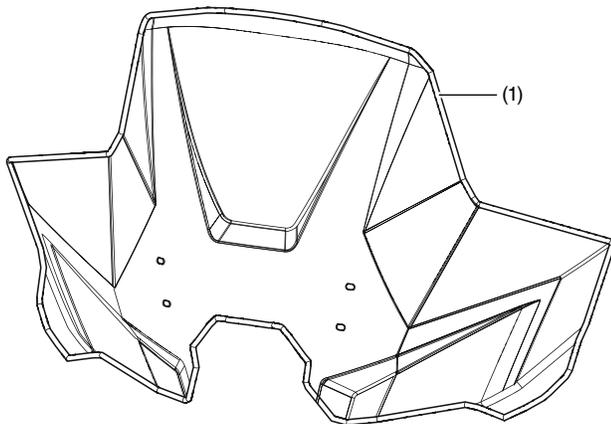

No.	Description	Qty
(1)	Windscreen	1
(2)	Adapter bracket, Right	1
(3)	Adapter bracket, Left	1
(4)	Support arm, Left	1
(5)	Support arm, Right	1
(6)	Center support bracket	1
(7)	Tensioner knob	2
(8)	8 x 30 mm bolt	2
(9)	8 mm locknut	2
(10)	6 mm flat washer	4
(11)	6 x 16 mm screw	4

## TOOLS AND SUPPLIES REQUIRED

12 mm open-end wrench

4 mm hex wrench

Thread Lock (Loctite 242 "blue" or equivalent)

## TORQUE CHARTS

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
6 mm screw	2.3	0.23	1.7
8 mm screw and nut	4.5	0.46	3.3

## USE AND CARE INFORMATION


- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Do not use a brush to clean this accessory as it may scratch the surface.
- Never use, or expose this accessory to petroleum solvents such as gasoline, thinner, benzene, acid, or alkaline cleaners.
- If the ATV is left covered for an extended period of time, park in the shade. Parking a covered ATV in direct sunlight can cause the accessory to deform due to heat buildup under the cover.
- Check the accessory mounts frequently and retighten if necessary.

## NOTICE



The windscreen can be damaged by high winds during transportation. Remove the windscreen before transporting or trailering the ATV. Be sure to check for correct handlebar range of motion and component clearance every time the windscreen is re-installed.

## INSTALLATION


1. Hold the center support bracket in place on the outside of the windscreen, lining up the threaded holes in the bracket with the holes in the windscreen.
2. Apply a small amount of thread lock to the threads of both 6 x 16 mm screws.
3. Install the Left and Right adapter brackets to the inside of the windscreen using two 6 x 16 mm screws and 6 mm flat washers per bracket.
  - The adapter brackets are slotted for adjustment; install the hardware in the nominal position for now.

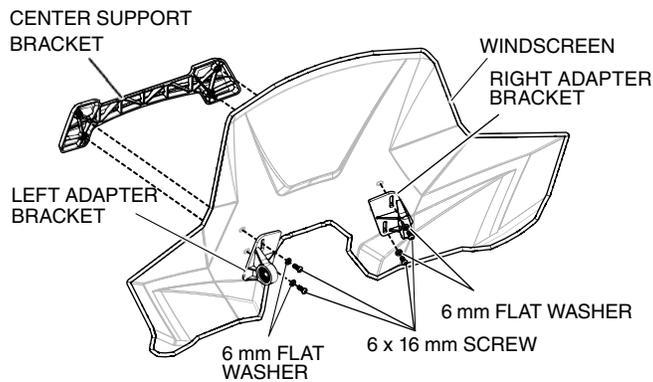


4. Install the Left and Right support arms to the previously-installed adapter brackets as shown, using one 8 x 30 mm bolt and one 8 mm locknut per bracket.
  - The bracket arm should be able to rotate smoothly during installation, while still supporting the windscreen.
  - Install the support arms at the approximate angle shown in the illustration to allow for easier installation to the vehicle.

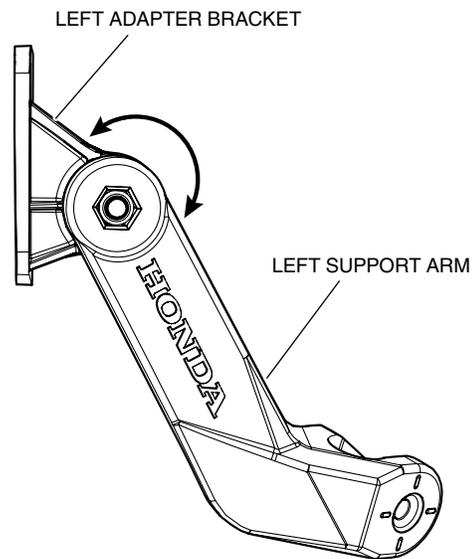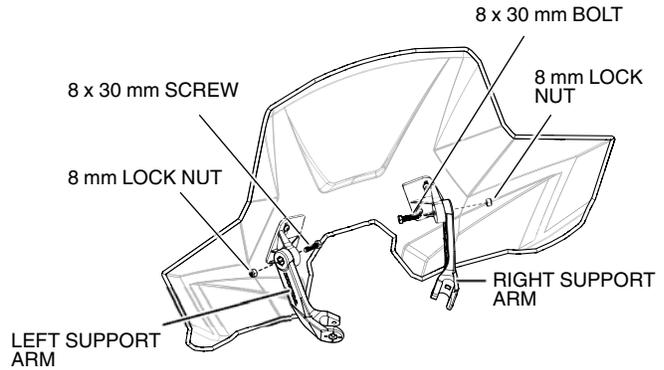

5. Orient the open ends of the support arms around the handlebar and snap them into place in the locations shown.

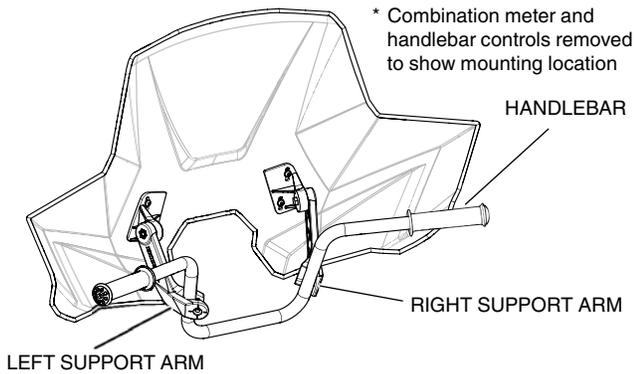

- Due to variations in the placement of the handlebar controls and/or other accessories, it may be necessary to adjust the routing of nearby cables to avoid interference with the windscreen support arms.
6. Adjust the position of the windscreen in relation to the combination meter by tilting the windscreen at the base of the support arms as needed.
    - Turn the handlebar along its entire range of motion, checking the clearance between the windscreen and the shift knob on the left side of the vehicle.
    - The windscreen position can be adjusted vertically by loosening the adapter bracket hardware and raising or lowering the windscreen.
  7. Once the desired position is achieved, thread a tensioner knob into the base of each support arm and tighten until snug.

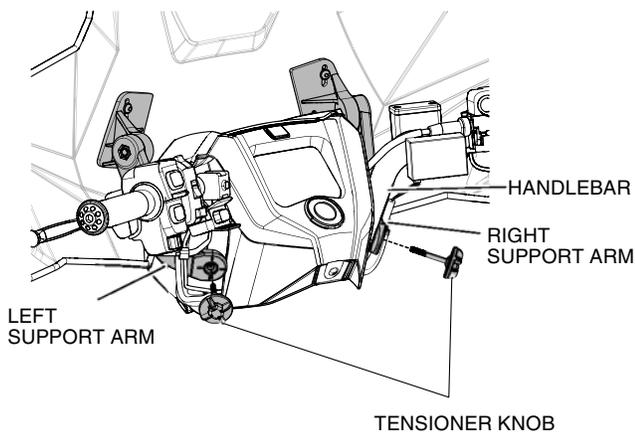

8. Once all adjustments have been made, tighten all hardware to the values shown in the Torque Chart.