

TANK PAD SIDE

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
TANK PAD SIDE	08P71-MLA-A00	CMX1100A/A2 CMX1100D/D2/D3	2024.9	MII	0.1 H

Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:







Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.

How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures.
Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

⚠ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 21°C (70°F).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.


PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.

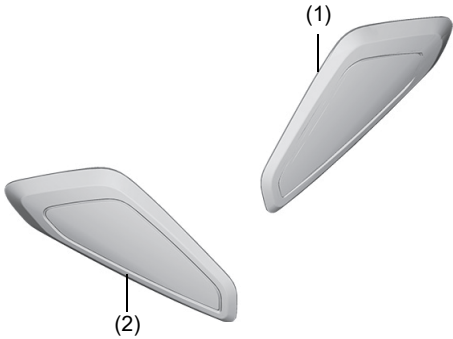Component	No.	Parts Name	Qty	Parts No.
	(1)	Right tank pad	1	-
	(2)	Left tank pad	1	-


INSTALLATION

INSTALLATION IMAGE

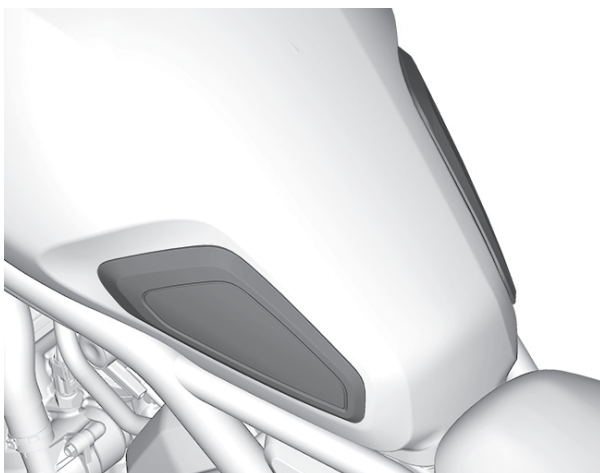


1. Clean the surface of the area shown using an isopropyl alcohol.



<Left side>

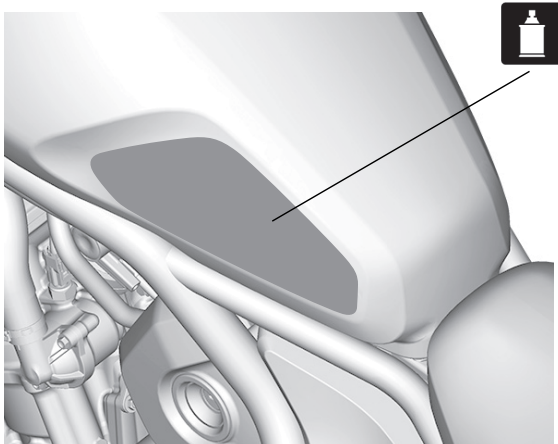


2. Remove the adhesive backing as shown.

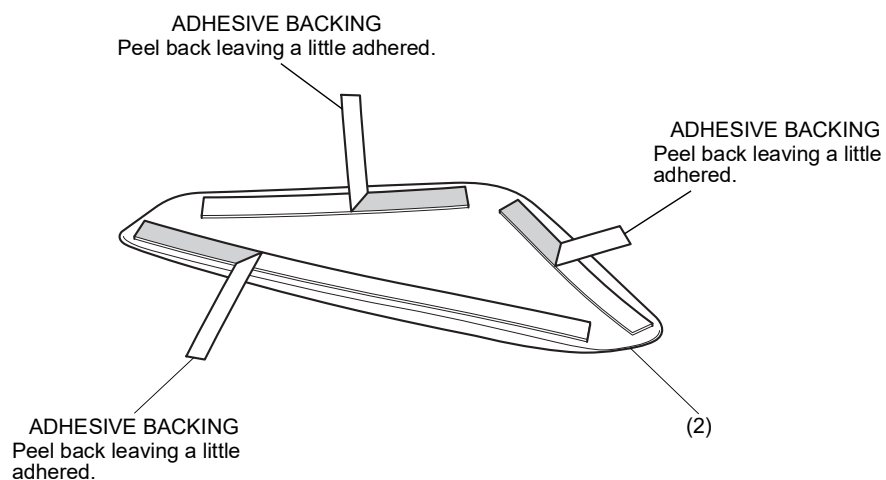

3. Attach the parts as shown.

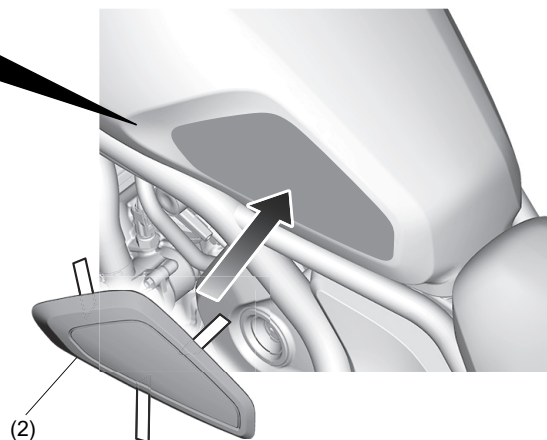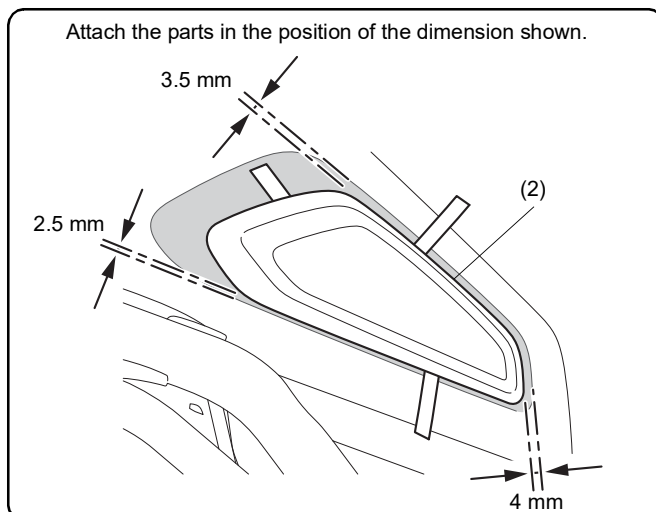

4. Pull out the backing as shown.

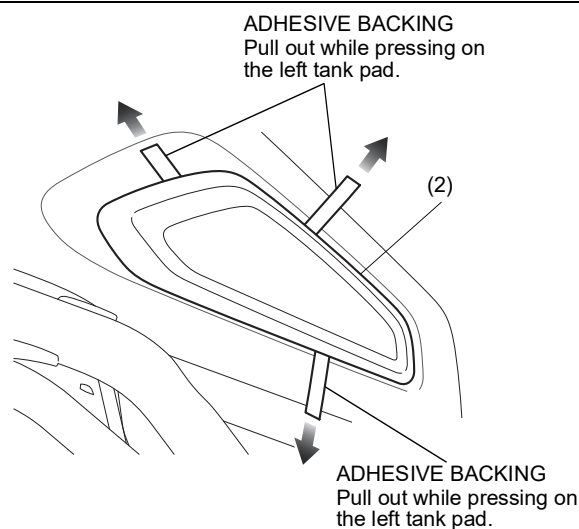

Apply adequate pressure to the attached parts.

- 5.
- Gradually move your thumb's fingertip while uniformly pressing the double-sided tape across the entire surface of the accessory to exert adhesive strength.
 - The adhesive strength of the double-sided tape increases in proportion to the pressure applied. Therefore, press the double-sided tape with the fingertip of your thumb with a force of at least 5 kgf (50 N) as a guide.
 - It is recommended to press a scale with the fingertip of your thumb in advance to get a sense of 5 kgf (50 N).
 - Leave undisturbed for more than 24 hours after sticking.

6. Repeat on the right side.