

## SCREEN COWL

Accessory Name	Parts Number	Application Model	Issue Date	Publication No.	FRT
SCREEN COWL	08R79-MLA-AA0	CMX1100A/D	2024.9	MII	0.5 H
SCREEN COWL STAY	08R76-MLA-AA0				
SCREEN COWL ATTACHMENT	08R77-MLA-AA0				

### Introduction

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Dealer:







Please give a copy of these instructions to your customer.

Customer:

Because it requires specialized knowledge and special tools and equipment, it is recommended to install it at a dealer with qualified automobile maintenance.
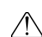
### How To Read These Symbols

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual.

-  **WARNING** You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
-  **CAUTION** You CAN be HURT if you don't follow instructions.
-  **NOTICE** The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.
-  **NOTE** Things you want to know, things that are useful to know.
-  Follow the instructions of the Service Manual.
-  Follow the other symbol instructions of the "Installation Instructions BASIC".

### Instruction Other Symbols

The symbols used throughout this instructions show specific service procedures.  
Refer to "Installation Instructions BASIC" for description of each symbol.

INFORMATION

CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTE:

- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.


PARTS LIST

When the instruction manual and installation instructions are included in this kit, be sure to give them to the customer.


<SCREEN COWL>

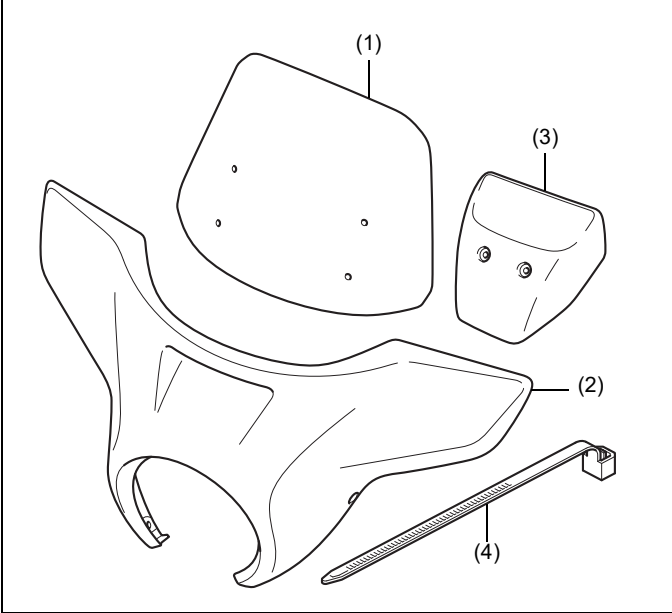Component	No.	Parts Name	Qty	Parts No.
	(1)	Wind screen	1	-
	(2)	Screen cowl	1	-
	(3)	Meter visor	1	-
	(4)	Wire tie	1	90651-KV6-003

<SCREEN COWL STAY>

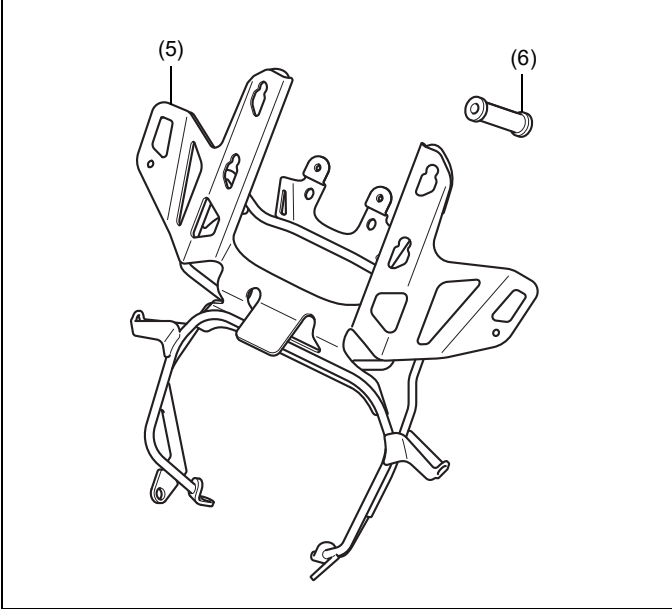Component	No.	Parts Name	Qty	Parts No.
	(5)	Screen cowl stay	1	-
	(6)	Screen cowl collar	2	-

<SCREEN COWL ATTACHMENT>

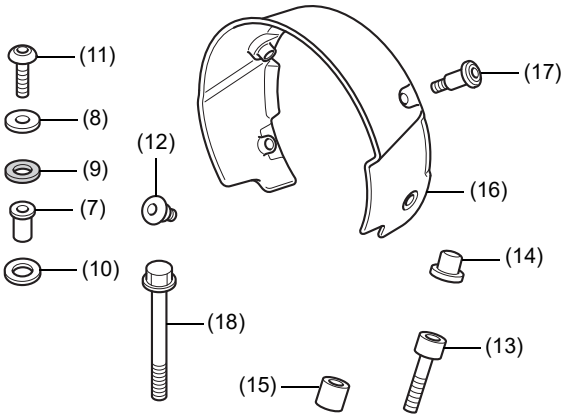
Component	No.	Parts Name	Qty	Parts No.
	(7)	Well nut	10	90111-KW3-003
	(8)	Washer (small)	4	90504-964-000
	(9)	Rubber	4	64205-166-610
	(10)	Washer (large)	4	90507-ZV1-000
	(11)	5 mm screw (long)	10	90133-MKN-D50
	(12)	5 mm screw (short)	2	90112-MLA-A00
	(13)	8 mm socket bolt	2	90113-GHB-710
	(14)	Mount rubber	2	61304-K87-A30
	(15)	Collar	2	64317-K87-A30
	(16)	Headlight cowl cover	1	64320-K87-A30
	(17)	5 mm socket bolt	4	90139-K87-A30
	(18)	6 mm flange bolt	2	95701-06080-00

TORQUE INFORMATION



Refer to the Service Manual for the torque values including standard torque of the removed parts. (🔧)

# INSTALLATION



## INSTALLATION IMAGE

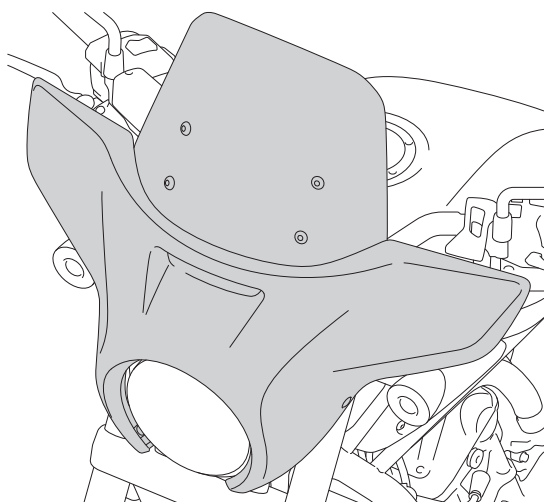


1. Remove the parts as shown. (📖)

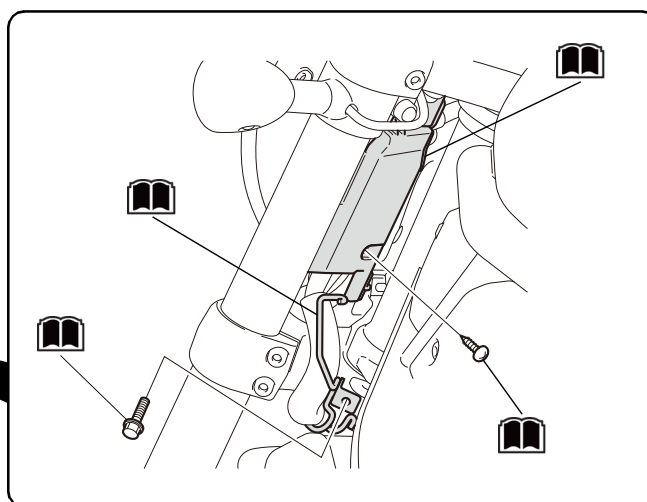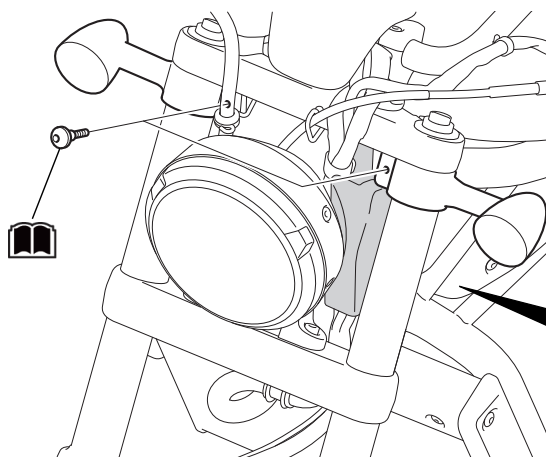


2. Install the parts as shown.

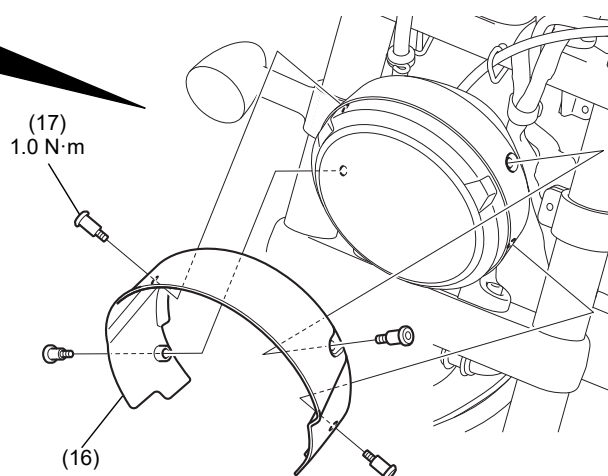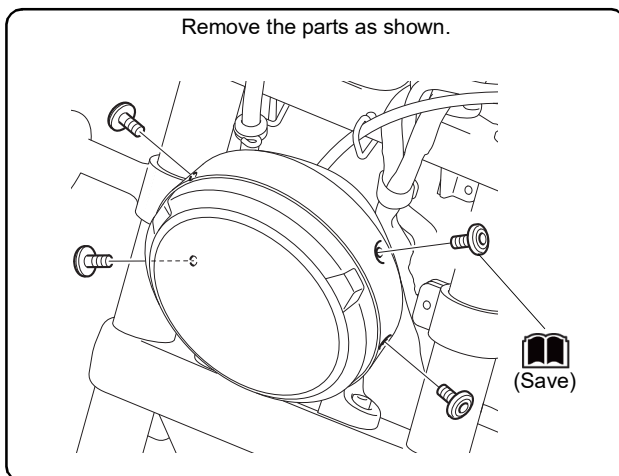



## 3. Remove the parts as shown. (📖)

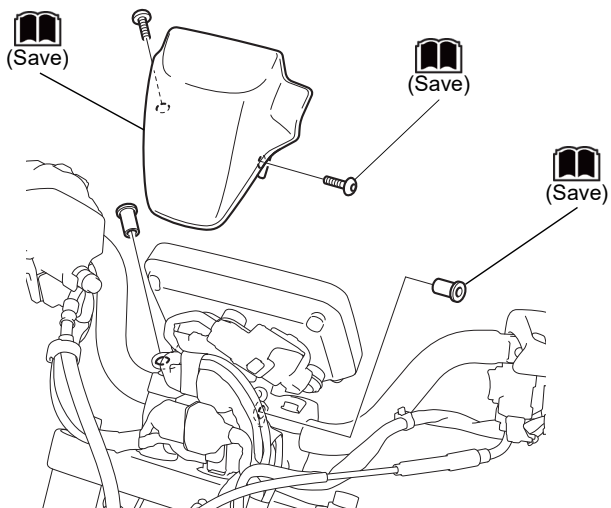



## 4. Mark the parts in the position shown. (🔪)

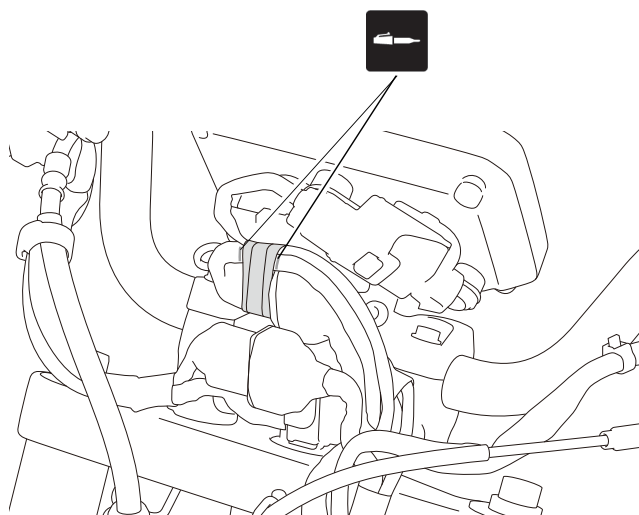



## 5. Remove the parts as shown.

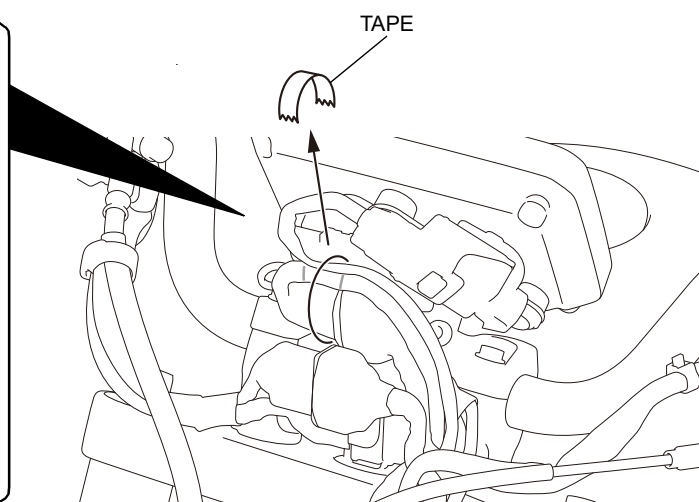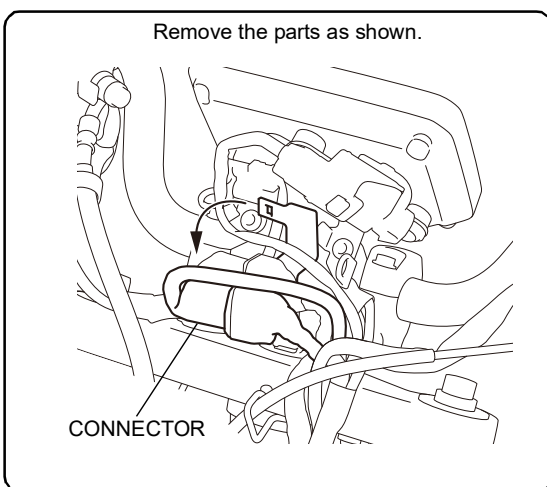



## 6. Wrap the harness with electric tape as shown.

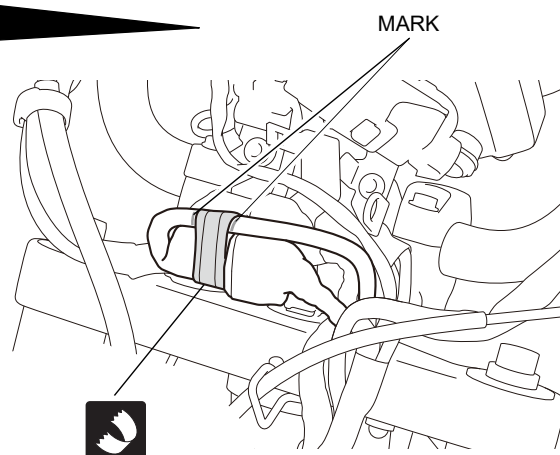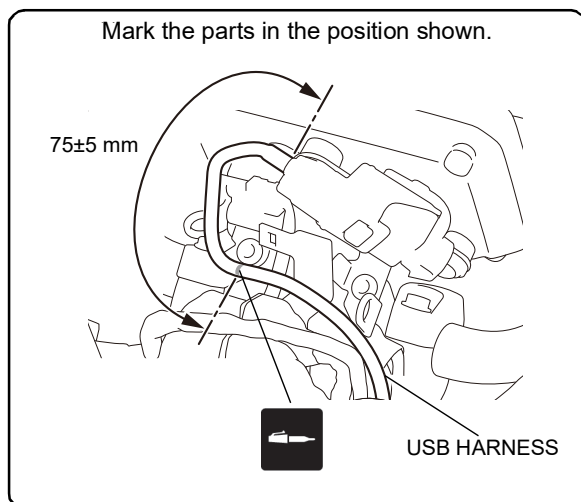


## 7. Secure the parts as shown.

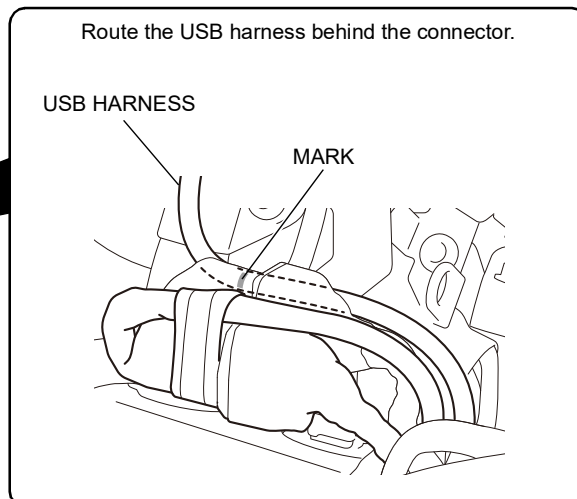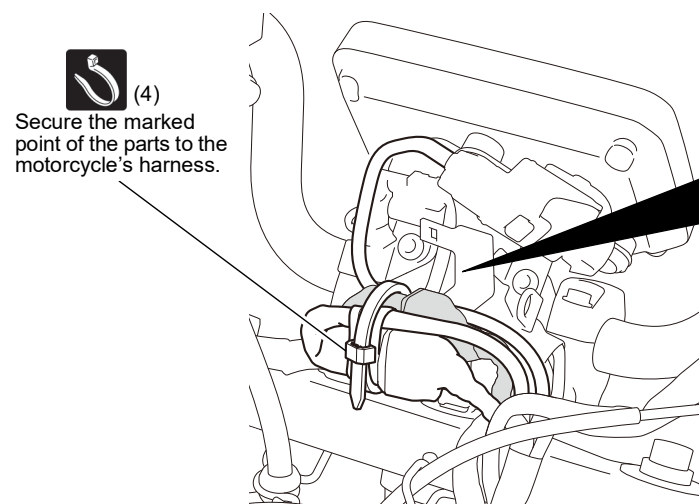


## 8. Install the parts as shown.

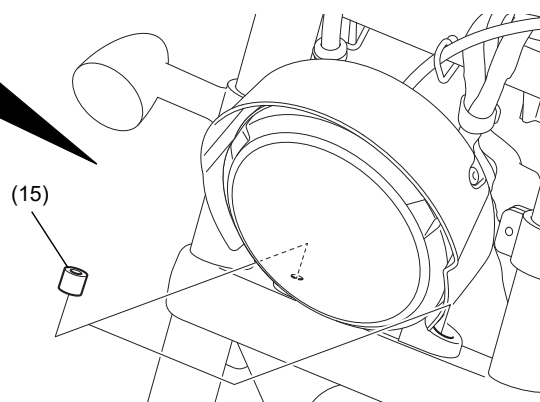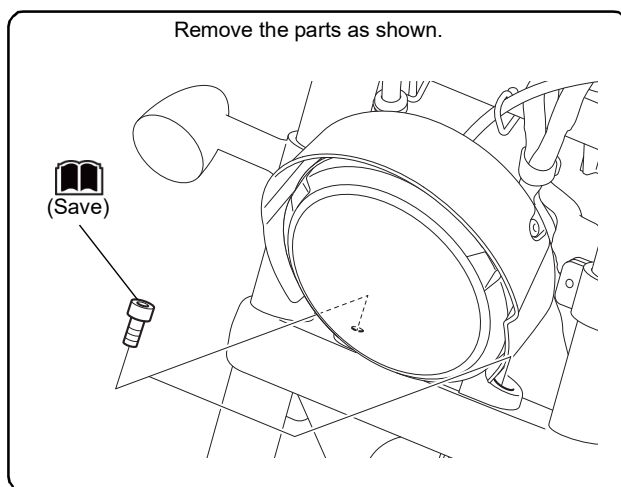

9. Install the parts as shown.

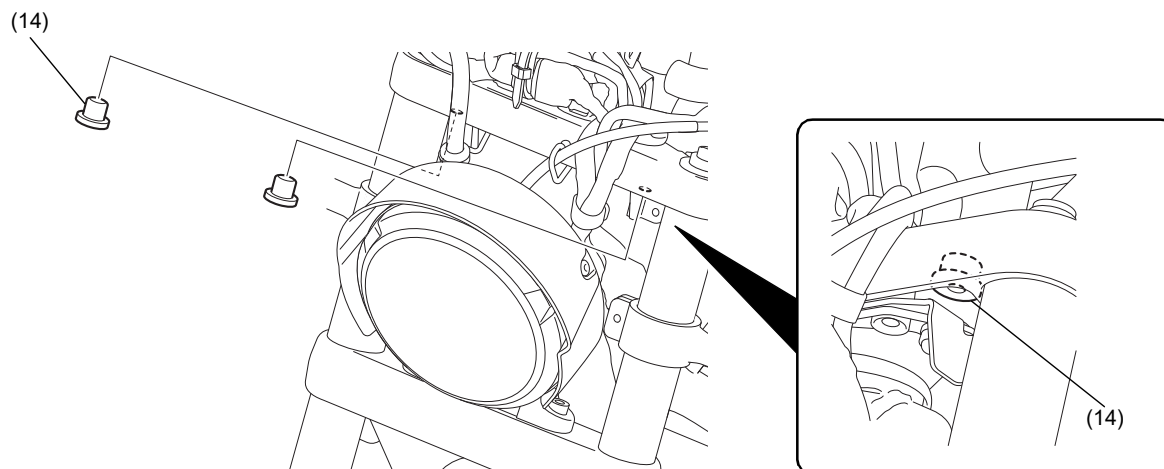


10. Install the parts as shown.

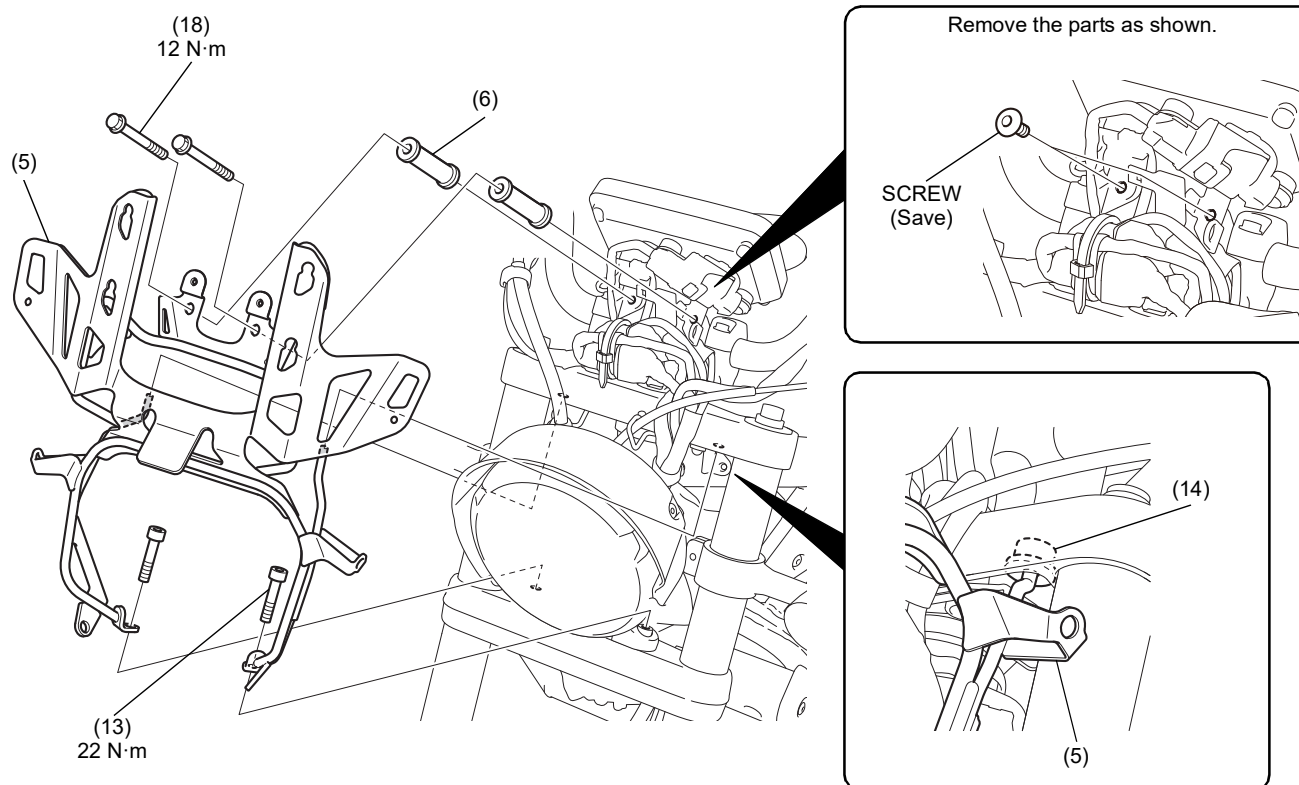


11. Install the motorcycle's parts in the reverse order of removal. (🔧)  
 • Confirm that any wire harness and hose is not caught or too tight.

12. Install the parts as shown.

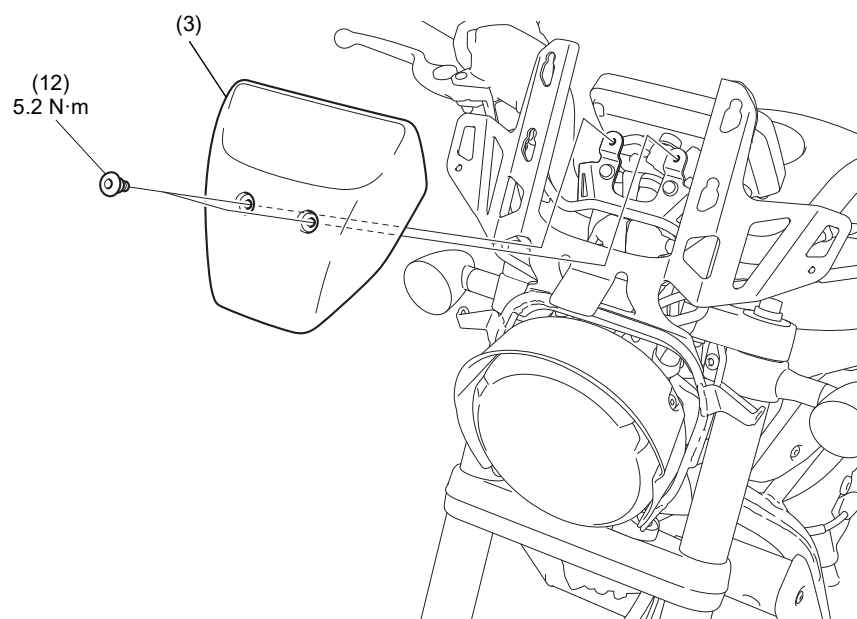


13. Install the parts as shown.

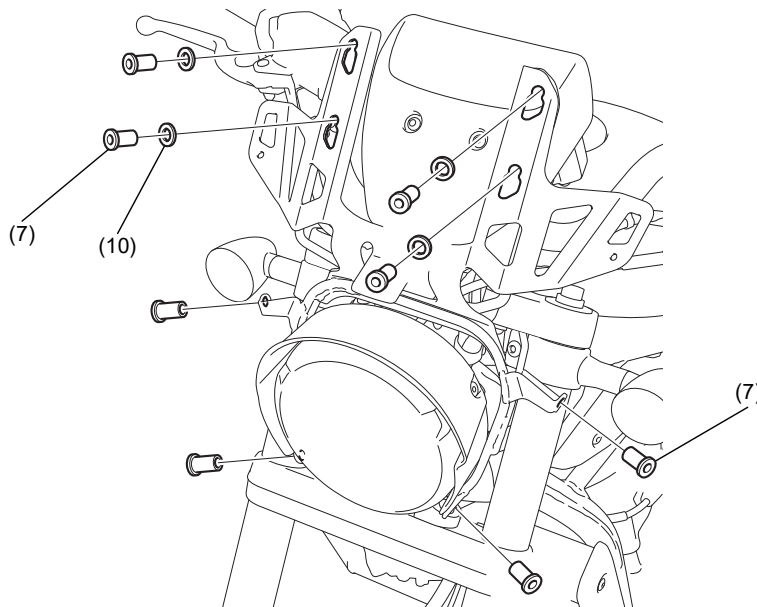





14. Install the parts as shown.

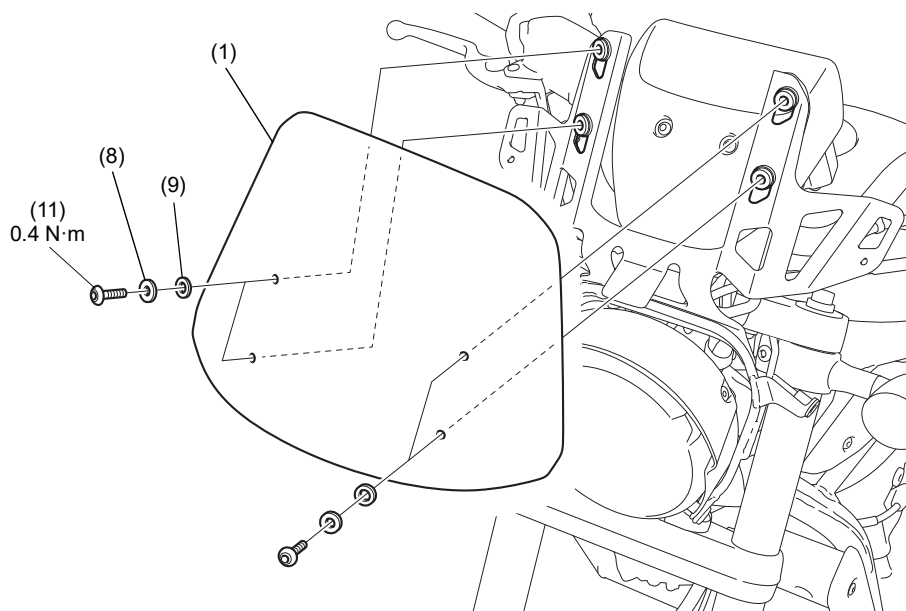

15. Install the parts as shown.

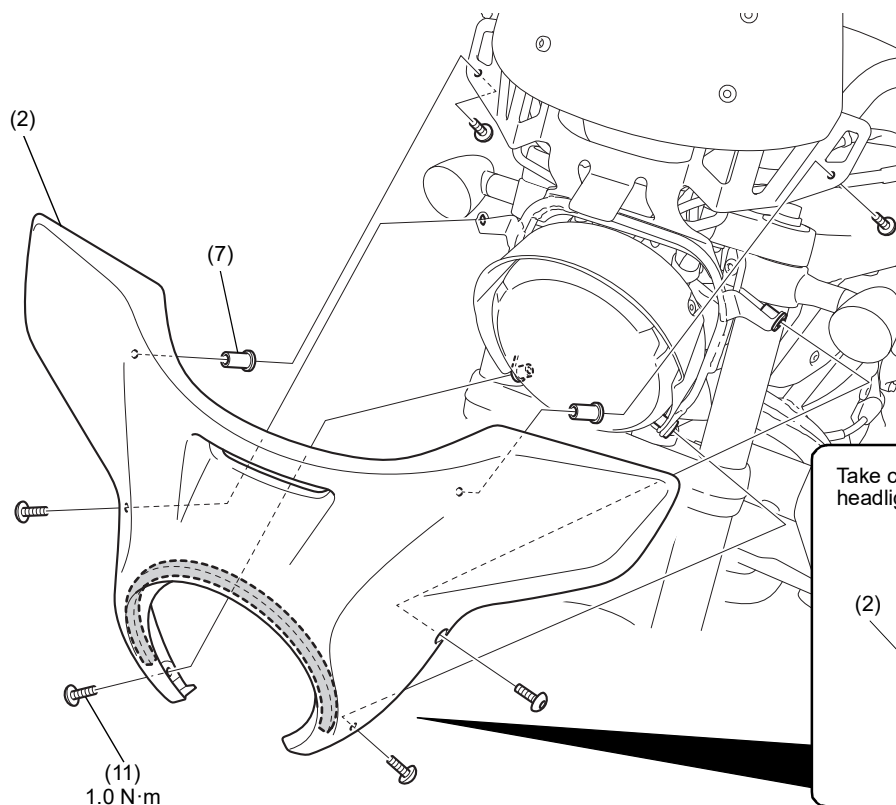

Take care not the sponge protrude from the headlight cowl cover.

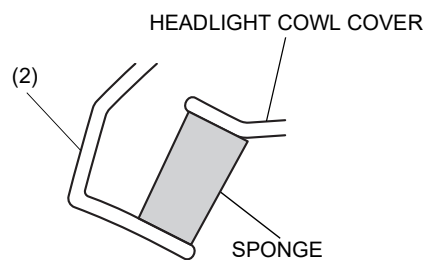

16. Move the handlebar right and left, and check that this accessory is not interfere with the motorcycle parts.