



INSTALLATION INSTRUCTIONS

Accessory

HEADLIGHT COWL
P/N 08R70-K87-A30

Application

CMX300/A
CMX500/A

Publication No.


MII

Issue Date

December 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

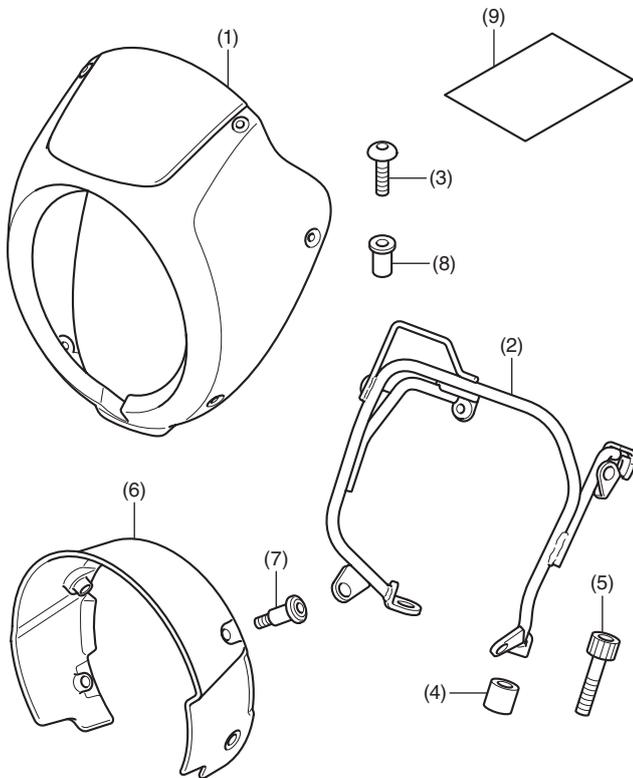

No.	Description	Qty
(1)	Headlight cowl	1
(2)	Stay	1
(3)	5 mm socket bolt (5 x 16 mm) (short)	4
(4)	Collar	2
(5)	8 mm socket bolt (8 x 40 mm)	2
(6)	Headlight cowl cover	1
(7)	5 mm socket bolt (5 x 19 mm) (long)	4
(8)	5 mm well nut	4
(9)	URL paper	1

TOOLS REQUIRED

Hex wrench (5 and 6 mm)

Torque wrench

TORQUE INFORMATION

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm socket bolt	1.0	0.1	0.7
8 mm socket bolt	22	2.2	16

INSTALLATION


▲ CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc. to cool before installing the accessory.


NOTE:

- Take care not to damage the painted surfaces of the motorcycle.
- Reinstall the removed parts on the motorcycle and make sure that wires and harnesses are not pinched.


- Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - Repeat on the right side.**

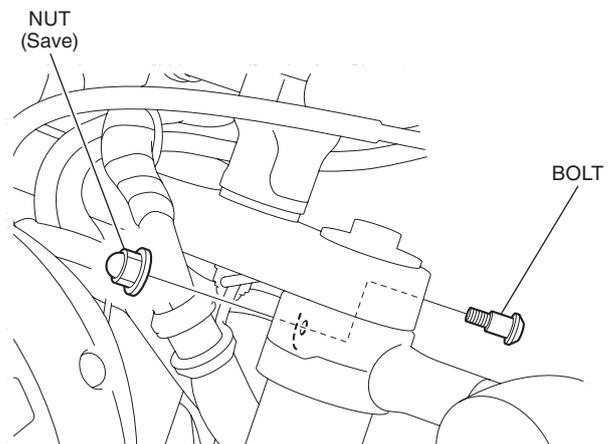


- Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - Repeat on the right side.**

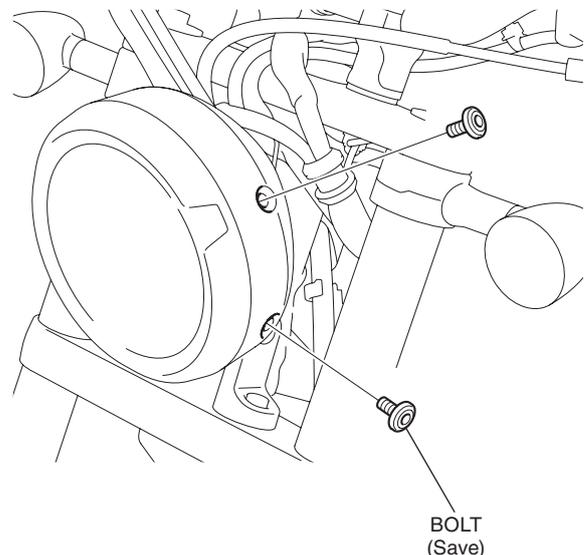


3. Install the headlight cowl cover as shown.
 - Repeat on the right side.

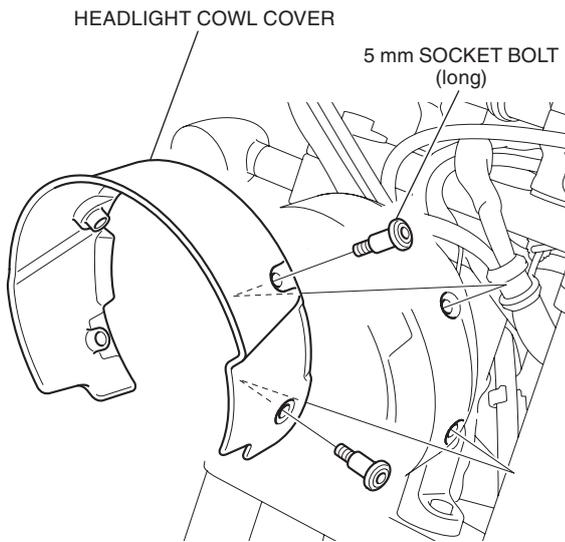

4. Refer to the Service Manual for the motorcycle, remove the motorcycle parts.
 - Repeat on the right side.


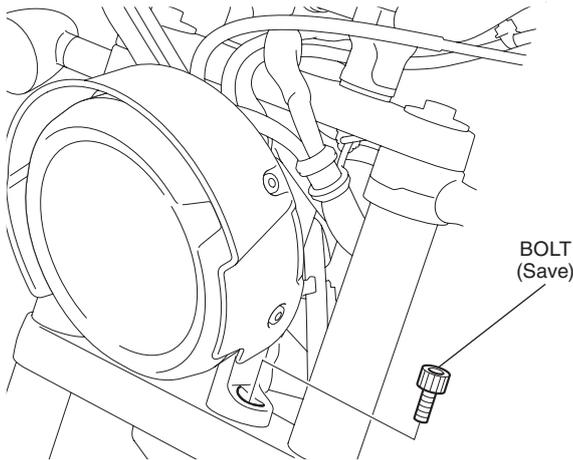


5. Loosely install the stay as shown.
 - Repeat on the right side.

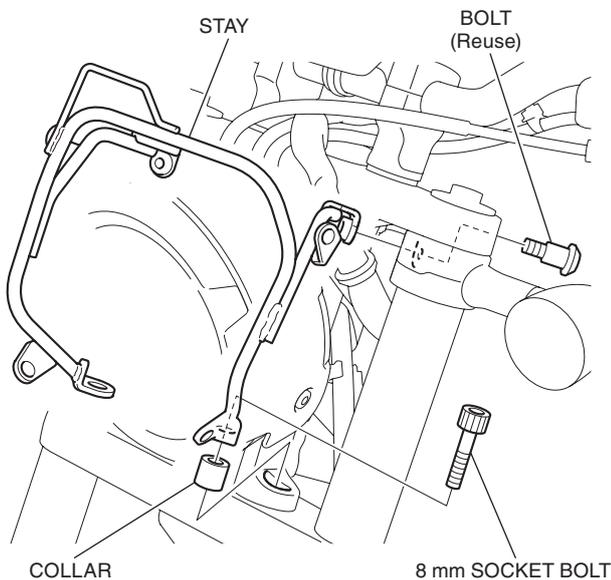

6. Tighten all loosely bolts to their specified torque values.

7. Install the headlight cowl as shown.
 - Repeat on the right side.

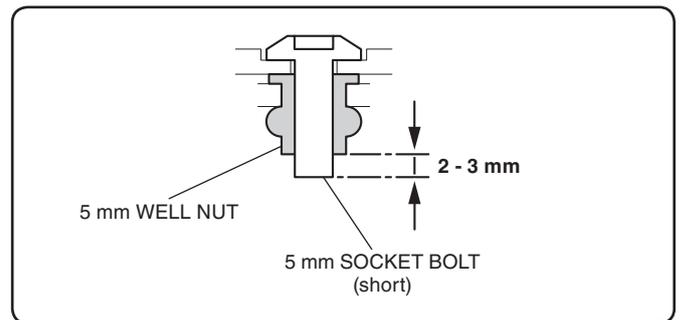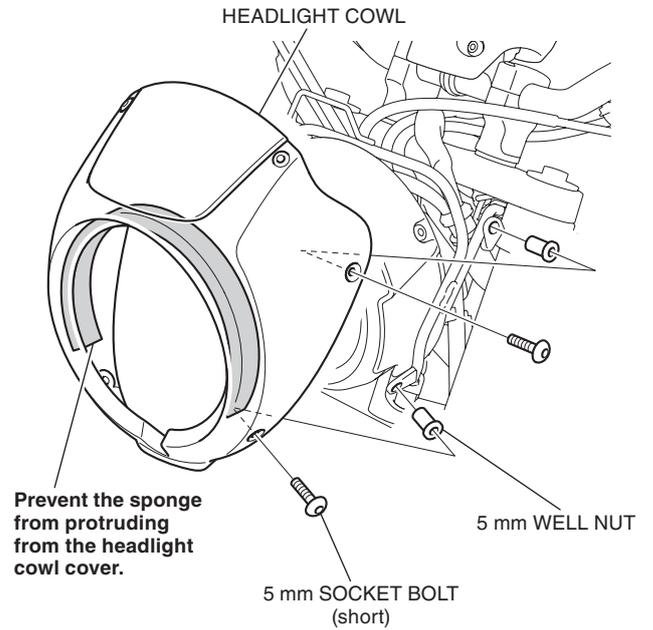

8. Move the handlebar right and left, and check that this accessory is not interfere with the motorcycle parts.