



INSTALLATION INSTRUCTIONS

Accessory

DASH POCKET NET
P/N 0SL60-HL4-A00

Application

SXS1000M3P/M3D/M3LS/
M5P/M5D/M5LS

Publication No.


MII 17762

Issue Date

March 2022

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

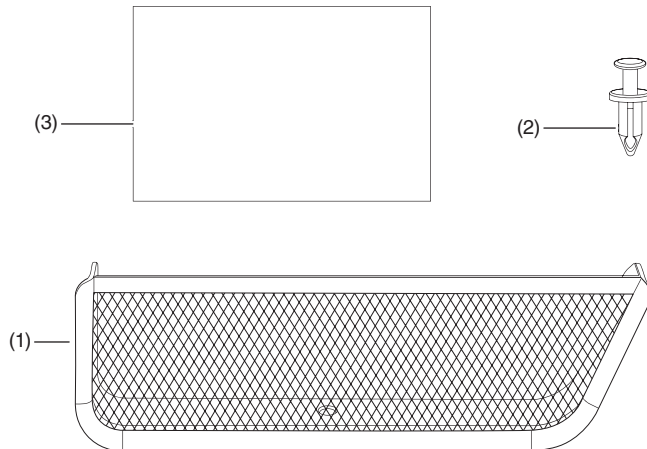

No.	Description	Qty
(1)	Dash Net	1
(2)	Trim Clips	3
(3)	Installation Instructions URL	1

TOOLS REQUIRED

Safety Goggles

Drill

Drill Bit (8 mm)

Marker or Paint Pen


USE AND CARE INFORMATION

- Completely read and understand the instructions before installing this accessory.
- To clean, sponge with mild soap and cold water, rinse and allow to drip-dry.


INSTALLATION

CAUTION: To prevent eye injuries, wear safety goggles when drilling.



1. Position the Dash Net and mark the center of the center hole using a marker or a paint pen.

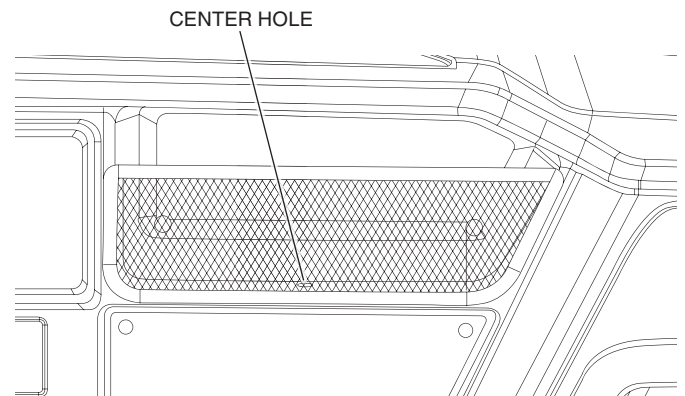


2. Remove the Dash Net and drill on the mark using an 8 mm drill bit.

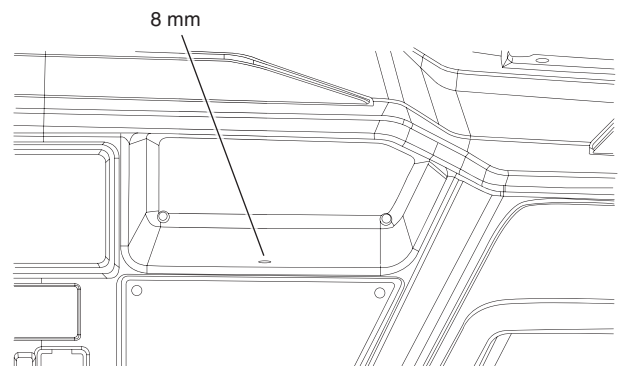

3. Reposition the Dash Net and insert a Trim Clip into the center hole. Do not fully install the Trim Clip at this time.

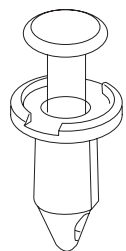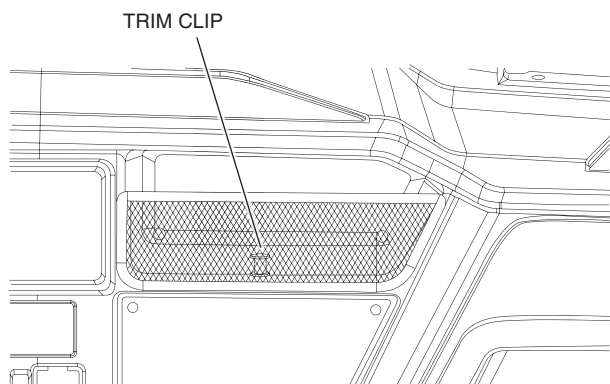


UNINSTALLED

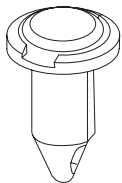


INSTALLED

4. Press the sides of the Dash Net firmly against the interior of the vehicle dash. Mark the centers of the two remaining holes using a marker or a paint pen.

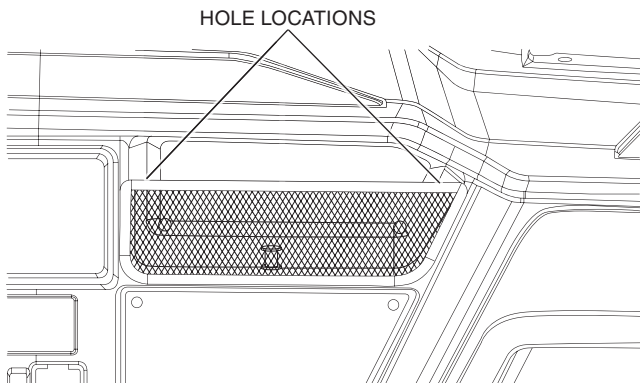

5. Remove the Trim Clip from the center hole. Remove the Dash Net and drill on the mark using an 8 mm drill bit.

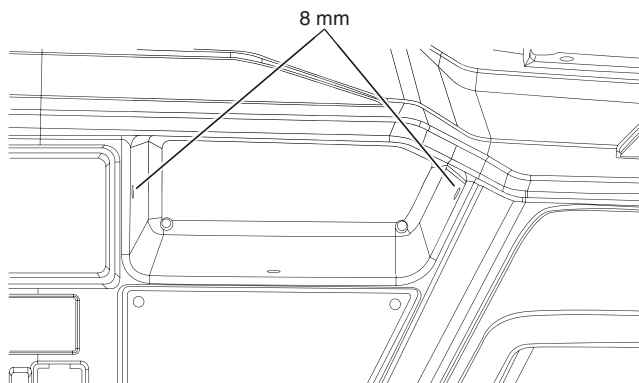

6. Reposition the Dash Net and fully install the Trim Clips into all three holes.

