




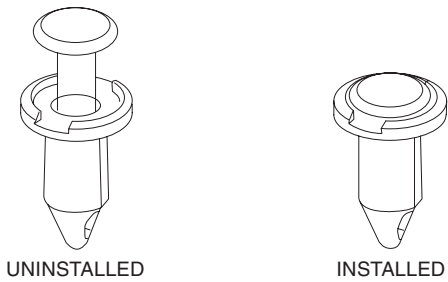


3. Reposition the Dash Net and insert a Trim Clip into the center hole. Do not fully install the Trim Clip at this time.

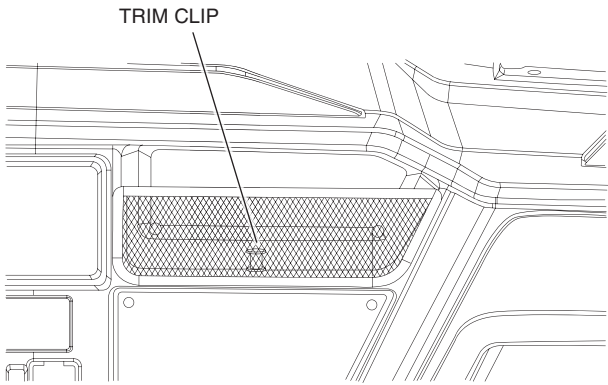

4. Press the sides of the Dash Net firmly against the interior of the vehicle dash. Mark the centers of the two remaining holes using a marker or a paint pen.

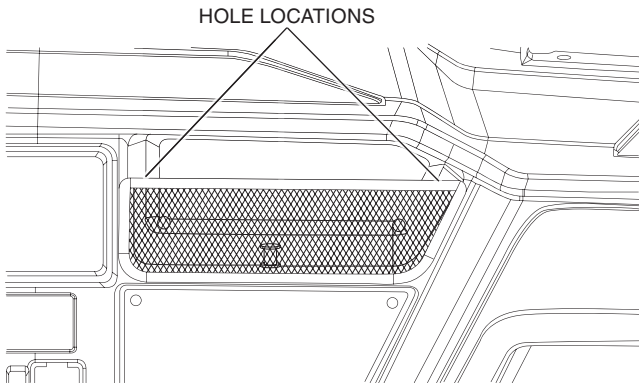

5. Remove the Trim Clip from the center hole. Remove the Dash Net and drill on the mark using an 8 mm drill bit.

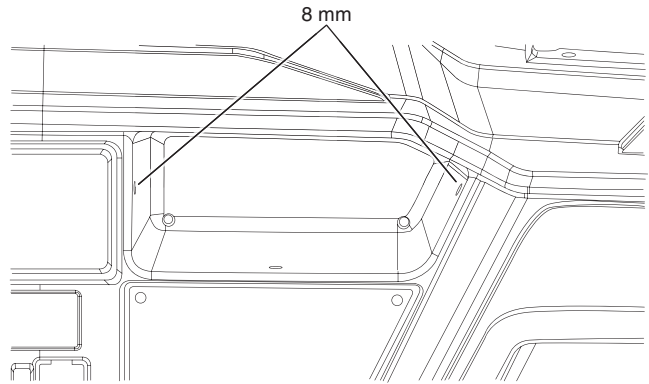

6. Reposition the Dash Net and fully install the Trim Clips into all three holes.

