



# INSTALLATION INSTRUCTIONS

Accessory

Rubber Floor Mat  
P/N 0SP63-HL3-102

Application

SXS700M2/M2D/M2L/  
M4/M4D/M4L

Publication No.


MII 17775

Issue Date

March 2022

**Honda Dealer: Please give a copy of these instructions to your customer.**

## PARTS LIST

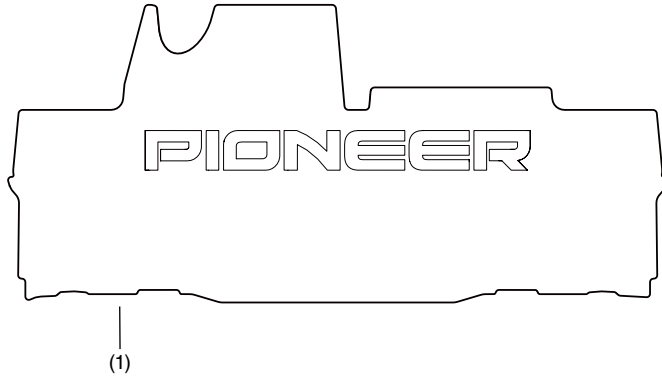

No.	Description	Qty
(1)	Floor mat	1

## TOOLS REQUIRED

Socket (10mm)

Ratchet

## USE AND CARE INFORMATION

- Replace this accessory with a new one if it is damaged or discolored excessively.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge.
- Never use petroleum solvents such as gasoline, thinner, or benzine to clean this accessory. Also do not use acid or alkaline cleaners.
- Wipe up spilled brake fluid at once as it may damage the surface.

## INSTALLATION

1. Ensure the foot well is empty, clean, and dry.
2. Remove the two screws holding the bottom of each door sill.
3. Place floor mat on the floor of the vehicle. Tuck the left and right edges of the of the floor mat under each door sill.
4. Re-install the two screws into the bottom of each door sill.

